

TSS-70 Series

7 in. and 10.1 in. Room Scheduling Touch Screens

Product Manual Crestron Electronics, Inc.

Original Instructions

The U.S. English version of this document is the original instructions. All other languages are a translation of the original instructions.

Regulatory Model: M201923002, M201923003

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement.

The product warranty can be found at <u>www.crestron.com/warranty</u>.

The specific patents that cover Crestron products are listed at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, visit www.crestron.com/opensource.

Crestron, the Crestron logo, Crestron Fusion, Crestron Home, Crestron Toolbox, PinPoint, Rava, Smart Graphics, and XiO Cloud are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. 2N is either a trademark or a registered trademark of 2N Telekomunikace in the United States and/or other countries. 22 Miles is either a trademark or a registered trademark or 22 Miles, Inc. in the United States and/or other countries. Appspace and the Appspace logo are either trademarks or registered trademarks of Appspace, Inc. in the United States and/or other countries. AskCody is either a trademark or a registered trademark of AskCody in the United States and/or other countries. Bluetooth is either a trademark or registered trademark of Bluetooth SIG, Inc. in the United States and/or other countries. EMS Software and the EMS logo are either trademarks or registered trademarks of EMS Software, LLC in the United States and/or other countries. Gingco.net is either a trademark or a registered trademark of Gingco.net in the United States and/or other countries. G Suite, Google, and Google Calendar are either trademarks or registered trademarks of Google, Inc. in the United States and/or other countries. Indoor Finders is either a trademark or a registered trademark of IntelliGroups, LLC in the United States and/or other countries. iOffice is either a trademark or a registered trademark of iOffice, LP in the United States and/or other countries. Kardham Digital is either a trademark or a registered trademark of Kardham Digital in the United States and/or other countries. Matrix Booking is either a trademark or a registered trademark of Matrix Booking in the United States and/or other countries. Active Directory, Microsoft, Microsoft Teams, and Office 365 are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. New Wave Apps is either a trademark or a registered trademark of New Wave Apps in the United States and/or other countries. NFS is either a trademark or a registered trademark of NFS Technology Group in the United States and/or other countries. OfficeSpace is either a trademark or a registered trademark of OfficeSpace Software Inc. in the United States and/or other countries. Pepperdash is either a trademark or a registered trademark of Pepperdash Technology Corporation in the United States and/or other countries. Door Tablet is either a trademark or a registered trademark of Public.Class Limited in the United States and/or other countries. Korbyt is either a trademark or registered trademark of RMG Enterprise Solutions, Inc. in the United States and/or other countries. Robin and the Robin logo are either trademarks or registered trademarks of Robin Powered, Inc. in the United States and/or other countries. SharingCloud is either a trademark or a registered trademark of SharingCloud in the United States and/or other countries. Sonos is either a trademark or a registered trademark of Sonos, Inc. in the United States and/or other countries. Space Connect is either a trademark or a registered trademark of Spaceconnect Pty Ltd in the United States and/or other countries. SpacelQ is either a trademark or a registered trademark of Space IQ, LLC in the United States and/or other countries. Telelogos is either a trademark or a registered trademark of Telelogos SAS in the United States and/or other countries. EventBoard, Teem, and the Teem logo are either trademarks or registered trademarks of Teem, LLC in the United States and/or other countries. Zoom and Zoom Rooms are either trademarks or registered trademarks of Zoom Video Communications, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2022 Crestron Electronics, Inc.

Contents

Overview	1
Features	
TSS-770 Features	
TSS-770-T Features	
TSS-1070 Features	
TSS-1070-T Features	
Physical Description	19
Specifications	
TSS-770 Specifications	
Product Specifications	
Dimension Drawings	
TSS-770-T Specifications	
Product Specifications	
Dimension Drawings	
TSS-1070 Specifications	
Product Specifications	
Dimension Drawings	
TSS-1070-T Specifications	
Product Specifications	
Dimension Drawings	
Installation	
Install the Mounting Bracket	
Electrical Box Mounting	
Drywall Mounting	
Install the Security Bracket (Optional)	
Connect the Touch Screen	
Mount the Touch Screen	
Configure the Touch Screen	
Access the Device Setup Screens	
Access the Web Configuration Interface	
Create an Admin Account	
Set the Time Zone	
Select an Application	
Configure Microsoft Teams Panels	
Configuration	
Local Configuration	53
Access the Setup Screens	53
Ethernet Setup	54

Application Selection	
Wi-Fi Setup	
Bluetooth Beacon	
Virtual Toolbar	
Diagnostics & Advanced	68
About	73
Web Configuration	74
Actions Menu	
Status	
Settings	
Security	
802.1x Configuration	
Application Selection	
Connect to XiO Cloud Service	
Operation	
Resources	
Crestron Support and Training	
Programmer and Developer Resources	
Related Documentation	

Overview

The Crestron® <u>TSS-770</u> and <u>TSS-1070</u> are wall mount touch screens designed specifically for room scheduling applications. The touch screens install near the entrance of a meeting room or huddle space to provide a clear indication of the room availability and schedule, and they integrate seamlessly with a variety of popular scheduling services.

NOTE: The TSS-770 and TSS-1070 are functionally similar. For simplicity within this documentation, the term "touch screen" is used except where otherwise noted.

Crestron offers the following variations for its standard touch screen models. Certain settings described in this document are not applicable to these models.

 The <u>TSS-770-T</u> and <u>TSS-1070-T</u> series touch screens are designed to specifically run the Microsoft Teams[®] Panels scheduling application.

Features

Refer to the following sections for more information on the features provided by various TSS-70 Series models.

- TSS-770 Features (on page 2)
- TSS-770-T Features (on page 7)
- TSS-1070 Features (on page 11)
- TSS-1070-T Features (on page 15)

TSS-770 Features

Crestron® TSS-770 series touch screens are designed to enhance and simplify room scheduling across an enterprise. The TSS-770 installs near a meeting room or huddle space to provide a clear indication of its availability and scheduling and integrates seamlessly with a variety of popular scheduling services.

The TSS-770 is also sold as part of a kit that includes one <u>TSW-770-LB</u> series room availability light bar, providing for a complete room scheduling solution out of the box.



Key features include:

- Touch screen designed specifically for enterprise room scheduling applications
- Delivers a superior and cost-effective alternative to consumer tablet devices
- Integrates directly with various room scheduling services
- 7 in. (178 mm) widescreen capacitive touch screen display
- Standard U.S., U.K., and European electrical box installation with additional mounting options available
- Single wire Ethernet connection with PoE or PoE+ power
- Wi-Fi[®] network connectivity
- Dual USB 2.0 ports for room availability accessories
- Enterprise grade security and authentication
- Choice of white or black smooth finish

Crestron Room Scheduling App

The native Crestron Scheduling app helps to maximize productivity and manage usage for meeting spaces. If desired, the room can be reserved on the spot for an ad hoc meeting. A <u>CEN-ODT-C-POE</u> occupancy sensor (sold separately) can also be paired to the touch screen, allowing for occupancy status to be reported instantly to the scheduling app for no-shows and unscheduled room usage.¹

Crestron room scheduling also offers three levels of customization—ranging from simply configuring settings in the web user interface to modifying the application source code for a completely unique appearance—depending on the needs of an enterprise.

Running the Crestron Scheduling App, the TSS-770 integrates directly with <u>Crestron Fusion®</u> software, Microsoft Exchange Server® software (for users of Outlook® software and Office 365® software), the Google Calendar™ calendaring app (including G Suite™ software), CollegeNET® 25Live® scheduling software, or Ad Astra® software. IBM® Notes® software is also supported through a Crestron Fusion on-premises server.

Third-Party Scheduling Apps

The TSS-770 includes support various third-party scheduling applications. New providers are made available via firmware updates. Whatever provider you choose, setup is as simple as connecting the touch screen to the network and choosing an app from the web-based setup menu or built-in setup screens. The selected app downloads from the cloud and installs on the touch screen without any programming or control system required.^{1,2,3}

Built for Enterprise Scheduling

The TSS-770 is engineered to meet the demands of a corporate office, conference center, or education environment. Its 7 in. (178 mm) capacitive display provides an intuitive user interface. The UI can be customized and branded with your choice of background images and logos.¹ A larger 10.1 in. (257 mm) version (TSS-1070 series) is also available.

- Functional: The TSS-770 provides a compact unit for scheduling applications that mounts over a standard electrical box or cutout. The TSS-770 offers high-speed Ethernet and PoE/PoE+ connectivity, or, for deployments without access to Ethernet, it can be connected to the network over Wi-Fi[®] communications via a local wireless access point (WAP).
- **Versatile**: Crestron offers a variety of mounting options for mounting the TSS-770 to drywall, masonry, glass, mullions, and other surfaces. Optional light bar and hallway sign accessories are available to increase the visibility of the room availability status.
- **Reliable**: The TSS-770 is purpose-built for permanent installation and years of reliable 24/7 operation in a commercial environment. To ensure the latest features are available, the TSS-770 checks nightly for app updates and loads the latest version automatically.
- Secure: The TSS-770 employs enterprise-grade networking with robust security features such as 802.1X authentication, TLS encryption, HTTPS connectivity, and Active Directory[®] service integration. These features protect your network against service interruptions and malicious intrusions.

• **Manageable**: The TSS-770 features cloud-based provisioning and management, which streamlines configuring, monitoring, and updating the touch screen on the network. The TSS-770 also supports SNMP, so it can be monitored by your IT administrator.

Status Indicator Options

The TSS-770 provides dual high-speed USB 2.0 ports for connecting Crestron room scheduling accessories (sold separately) to the touch screen that enhance an enterprise room scheduling solution.

- The optional <u>TSW-770-LB</u> series light bars provide a 180° visual indication of a room's availability status, illuminating green if the room is available and red when reserved, with options for custom color mixing and programming.⁴
- The optional <u>SSW</u>, <u>SSW-EL</u>, <u>SSC</u>, and <u>SSC-EL</u> series hallway signs feature a two sided acrylic sign face that can be custom engraved with the room name or number. The <u>SIW-100</u> offers a lower profile wall mount status indicator.⁴

Bluetooth Beacon

The built-in Bluetooth® proximity detection beacon works with the Crestron Go App and Crestron App to determine when a mobile device is in or near the same room as the beacon, and signals the mobile app to automatically display the appropriate controls and information for the room.⁵

Proximity Sensor and Brightness Controls

The TSS-770 provides a built-in proximity sensor that wakes the screen without requiring any user interaction, and automatic brightness controls ensure optimal visibility under varying lighting conditions.

Power over Ethernet

PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches (<u>CEN-SW-POE-5</u> or <u>CEN-SWPOE-16</u>, sold separately) offer a total networking solution with built-in PoE for multiple touch screens. A PoE Injector (<u>PWE-4803RU</u>, sold separately) is also available to support a single touch screen.

NOTE: Refer to the "Power" specifications for more details.

XiO Cloud Service

The TSS-770 is compatible with the XiO Cloud® service, which remotely provisions, monitors, and manages Crestron devices across an enterprise or an entire client base. Built on the Microsoft® Azure® software platform and utilizing Microsoft's Azure IoT Hub technology, XiO Cloud enables installers and IT managers to deploy and manage thousands of devices simultaneously. Unlike other virtual machine-based cloud solutions, Azure services provide unlimited scalability. For more information, visit www.crestron.com/xiocloud.

Wall Mount Options

Using the bracket provided, the TSS-770 is easily installed over a 2-gang or 3-gang US electrical box, or a 2-gang European or UK electrical box. A security latch option is included to deter unauthorized removal of the touch screen.

Additional wall mounting options are available using the optional <u>TSW-UMB-70</u> universal mounting bracket, <u>TSW-UMB-70-PMK</u> preconstruction mounting kit, and <u>TSW-UMB-70-BBI</u> back box (sold separately).⁶

Optional Mounting Accessories

The TSS-770 supports numerous optional mounting accessories (sold separately) that allow the touch screen to be installed in all kinds of installations:

- The <u>TSW-770-MSMK</u> multisurface mount kit allows a TSS-770 touch screen to be mounted directly to virtually any flat surface, which is ideal for mounting at the entrance to a meeting space for room scheduling applications.
- The <u>TSW-770/1070-MUMK</u> allows the touch screen to be attached to the mullion of an interior glass wall, window, or partition.
- The <u>TSW-770/1070-RMB-1</u> and <u>TSW-770/1070-RMB-2</u> retrofit mounting brackets allow for retrofit installations in place of an older Crestron touch screen (APAD, CT-1000, LC-1000, TPS-4L, or TPS-2000L) without having to tear out the old mounting hardware or patch the wall.
- The <u>TSW-770-FP</u> face plate hides the electrical box from view when replacing a TSW-760 or TSS-7 series touch screen with a TSS-770 series touch screen.
- Thought not typical for most scheduling applications, the <u>TSW-570/770-RMK-1</u> rack mount kit can be used to mount the touch screen into a 19 in. rack. When installed, the touch screen occupies three rack spaces.

The TSS-770 is also compatible with Wall-Smart[®] flush wall mount products via a partnership with Crestron. For more information on supported Wall-Smart hardware, click <u>here</u>.

Notes:

- Actual functionality and on-screen appearance varies based on which scheduling app is in use and how the app is set up. The functionality described in this spec sheet generally refers to the Crestron Scheduling app. Each thirdparty provider determines the functionality and appearance of their respective app. Refer to each provider's website for more information.
- 2. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
- 3. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third-party apps typically run on the TSS-770 as they do on a tablet device. The TSS-770 runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TSS-770. The TSS-770 cannot be interfaced with a control system and cannot be custom programmed for any other functionality. An internet connection is required.
- 4. The TSS-770 may be powered by either a PoE or PoE+ power source when a light bar or hallway sign is connected. Refer to the Accessories section for a list of all available options. Refer to each accessory's spec sheet for further information.
- 5. Bluetooth technology is used solely for proximity detection and does not transmit or receive any control, multimedia, or personal data. Crestron Bluetooth beacons are only visible to Bluetooth enabled devices that are specifically programmed and configured to work with them.
- 6. The TSW-UMB-70 is also compatible with older TSW-UMB-PMK series preconstruction mounting kits and TSW-BBI series back boxes, allowing the TSS-770 to be installed in place of a previous generation touch screen.

TSS-770-T Features

Crestron® TSS-770-T series touch screens are designed to enhance and simplify room scheduling across an enterprise. The TSS-770-T installs near a meeting room or huddle space to provide a clear indication of its availability and scheduling and integrates seamlessly with the Microsoft Teams® Panels scheduling application.

The TSS-770-T is sold as part of a kit that includes one <u>TSW-770-LB</u> series room availability light bar, providing for a complete room scheduling solution out of the box.



Key features include:

- Touch screen designed specifically to run the Microsoft Teams[®] Panels scheduling application
- Delivers a superior and cost-effective alternative to consumer tablet devices
- 7 in. (178 mm) widescreen capacitive touch screen display
- Standard U.S., U.K., and European electrical box installation with additional mounting options available
- Single wire Ethernet connection with PoE or PoE+ power
- Wi-Fi[®] network connectivity
- Dual USB 2.0 ports for room availability accessories
- Enterprise grade security and authentication
- Choice of white or black smooth finish

Microsoft Teams Panels

The native Microsoft Teams Panels scheduling application helps to maximize productivity and manage usage for meeting spaces via Microsoft Teams. The touch screen can be configured to use the Microsoft Teams scheduling calendar, allowing users to book meetings through their Microsoft Teams account. If desired, the room can be reserved on the spot for an ad hoc meeting.^{1,2}

NOTE: For more information on Microsoft Teams Panels, refer to https://docs.microsoft.com/en-us/microsoftteams/devices/teams-panels.

Built for Enterprise Scheduling

The TSS-770-T is engineered to meet the demands of a corporate office, conference center, or education environment. Its 7 in. (178 mm) capacitive display provides an intuitive user interface. A larger 10.1 in. (257 mm) version (<u>TSS-1070</u> series) is also available.

- Functional: The TSS-770-T provides a compact unit for scheduling applications that mounts over a standard electrical box or cutout. The TSS-770-T offers high-speed Ethernet and PoE/PoE+ connectivity, or, for deployments without access to Ethernet, it can be connected to the network over Wi-Fi[®] communications via a local wireless access point (WAP).
- Versatile: Crestron offers a variety of mounting options for mounting the TSS-770-T to drywall, masonry, glass, mullions, and other surfaces. Optional light bar and hallway sign accessories are available to increase the visibility of the room availability status.
- **Reliable**: The TSS-770-T is purpose-built for permanent installation and years of reliable 24/7 operation in a commercial environment. To ensure the latest features are available, the TSS-770-T checks nightly for app updates and loads the latest version automatically.
- Secure: The TSS-770-T employs enterprise-grade networking with robust security features such as 802.1X authentication, TLS encryption, HTTPS connectivity, and Active Directory[®] service integration. These features protect your network against service interruptions and malicious intrusions.
- **Manageable**: The TSS-770-T features cloud-based provisioning and management, which streamlines configuring, monitoring, and updating the touch screen on the network. The TSS-770-T also supports SNMP, so it can be monitored by your IT administrator.

Status Indicator Options

The TSS-770-T provides dual high-speed USB 2.0 ports for connecting Crestron room scheduling accessories (sold separately) to the touch screen that enhance an enterprise room scheduling solution.

- The included <u>TSW-770-LB</u> series light bar provides a 180° visual indication of a room's availability status, illuminating green if the room is available and red when reserved, with options for custom color mixing and programming.³
- The optional <u>SSW</u>, <u>SSW-EL</u>, <u>SSC</u>, and <u>SSC-EL</u> series hallway signs feature a two sided acrylic sign face that can be custom engraved with the room name or number. The <u>SIW-100</u> offers a lower profile wall mount status indicator.³

Bluetooth Beacon

The built-in Bluetooth[®] proximity detection beacon works with the Crestron Go App and Crestron App to determine when a mobile device is in or near the same room as the beacon, and signals the mobile app to automatically display the appropriate controls and information for the room.⁴

Proximity Sensor and Brightness Controls

The TSS-770-T provides a built-in proximity sensor that wakes the screen without requiring any user interaction, and automatic brightness controls ensure optimal visibility under varying lighting conditions.

Power over Ethernet

PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches (<u>CEN-SW-POE-5</u> or <u>CEN-SWPOE-16</u>, sold separately) offer a total networking solution with built-in PoE for multiple touch screens. A PoE Injector (<u>PWE-4803RU</u>, sold separately) is also available to support a single touch screen.

NOTE: Refer to the "Power" specifications for more details.

XiO Cloud Service

The TSS-770-T is compatible with the XiO Cloud® service, which remotely provisions, monitors, and manages Crestron devices across an enterprise or an entire client base. Built on the Microsoft® Azure® software platform and utilizing Microsoft's Azure IoT Hub technology, XiO Cloud enables installers and IT managers to deploy and manage thousands of devices simultaneously. Unlike other virtual machine-based cloud solutions, Azure services provide unlimited scalability. For more information, visit www.crestron.com/xiocloud.

Wall Mount Options

Using the bracket provided, the TSS-770-T is easily installed over a 2-gang or 3-gang US electrical box, or a 2-gang European or UK electrical box. A security latch option is included to deter unauthorized removal of the touch screen.

Additional wall mounting options are available using the optional <u>TSW-UMB-70</u> universal mounting bracket, <u>TSW-UMB-70-PMK</u> preconstruction mounting kit, and <u>TSW-UMB-70-BBI</u> back box (sold separately).⁵

Optional Mounting Accessories

The TSS-770-T supports numerous optional mounting accessories (sold separately) that allow the touch screen to be installed in all kinds of installations:

- The <u>TSW-770-MSMK</u> multisurface mount kit allows a TSS-770-T touch screen to be mounted directly to virtually any flat surface, which is ideal for mounting at the entrance to a meeting space for room scheduling applications.
- The <u>TSW-770/1070-MUMK</u> allows the touch screen to be attached to the mullion of an interior glass wall, window, or partition.

- The <u>TSW-770/1070-RMB-1</u> and <u>TSW-770/1070-RMB-2</u> retrofit mounting brackets allow for retrofit installations in place of an older Crestron touch screen (APAD, CT-1000, LC-1000, TPS-4L, or TPS-2000L) without having to tear out the old mounting hardware or patch the wall.
- Thought not typical for most scheduling applications, the <u>TSW-570/770-RMK-1</u> rack mount kit can be used to mount the touch screen into a 19 in. rack. When installed, the touch screen occupies three rack spaces.

Notes:

- 1. Microsoft determines the functionality and appearance of the Microsoft Teams room scheduling application. Refer to the Microsoft website for more information.
- 2. Additional subscriptions and/or licenses may be required. Refer to the Microsoft website for details about the capabilities and requirements of its scheduling application and services. The TSS-770-T cannot be interfaced with a control system and cannot be custom programmed for any other functionality. An internet connection is required.
- 3. The TSS-770-T may be powered by either a PoE or PoE+ power source when a light bar or hallway sign is connected. Refer to the Accessories section for a list of all available options. Refer to each accessory's spec sheet for further information.
- 4. Bluetooth technology is used solely for proximity detection and does not transmit or receive any control, multimedia, or personal data. Crestron Bluetooth beacons are only visible to Bluetooth enabled devices that are specifically programmed and configured to work with them.
- 5. The TSW-UMB-70 is also compatible with older TSW-UMB-PMK series preconstruction mounting kits and TSW-BBI series back boxes, allowing the TSS-770-T to be installed in place of a previous generation touch screen.

TSS-1070 Features

Crestron® TSS-1070 series touch screens are designed to enhance and simplify room scheduling across an enterprise. The TSS-1070 installs near a meeting room or huddle space to provide a clear indication of its availability and scheduling and integrates seamlessly with a variety of popular scheduling services.

The TSS-1070 is also sold as part of a kit that includes one <u>TSW-1070-LB</u> series room availability light bar, providing for a complete room scheduling solution out of the box.



Key features include:

- Touch screen designed specifically for enterprise room scheduling applications
- Delivers a superior and cost-effective alternative to consumer tablet devices
- Integrates directly with various room scheduling services
- 10.1 in. (257 mm) widescreen capacitive touch screen display
- Standard U.S., U.K., and European electrical box installation with additional mounting options available
- Single wire Ethernet connection with PoE or PoE+ power
- Wi-Fi[®] network connectivity
- Dual USB 2.0 ports for room availability accessories
- Enterprise grade security and authentication
- Choice of white or black smooth finish

Crestron Room Scheduling App

The native Crestron Scheduling app helps to maximize productivity and manage usage for meeting spaces. If desired, the room can be reserved on the spot for an ad hoc meeting. A <u>CEN-ODT-C-POE</u> occupancy sensor (sold separately) can also be paired to the touch screen, allowing for occupancy status to be reported instantly to the scheduling app for no-shows and unscheduled room usage.¹

Crestron room scheduling also offers three levels of customization—ranging from simply configuring settings in the web user interface to modifying the application source code for a completely unique appearance—depending on the needs of an enterprise.

Running the Crestron Scheduling App, the TSS-1070 integrates directly with <u>Crestron Fusion®</u> software, Microsoft Exchange Server® software (for users of Outlook® software and Office 365® software), the Google Calendar™ calendaring app (including G Suite™ software), CollegeNET® 25Live® scheduling software, or Ad Astra® software. IBM® Notes® software is also supported through a Crestron Fusion on-premises server.

Third-Party Scheduling Apps

The TSS-1070 includes support various third-party scheduling applications. New providers are made available via firmware updates. Whatever provider you choose, setup is as simple as connecting the touch screen to the network and choosing an app from the web-based setup menu or built-in setup screens. The selected app downloads from the cloud and installs on the touch screen without any programming or control system required.^{1,2,3}

Built for Enterprise Scheduling

The TSS-1070 is engineered to meet the demands of a corporate office, conference center, or education environment. Its 10.1 in. (257 mm) capacitive display provides an intuitive user interface. The UI can be customized and branded with your choice of background images and logos.¹ A smaller 7 in. (178 mm) version (<u>TSS-770</u> series) is also available.

- Functional: The TSS-1070 provides a compact unit for scheduling applications that mounts over a standard electrical box or cutout. The TSS-1070 offers high-speed Ethernet and PoE/PoE+ connectivity, or, for deployments without access to Ethernet, it can be connected to the network over Wi-Fi[®] communications via a local wireless access point (WAP).
- Versatile: Crestron offers a variety of mounting options for mounting the TSS-1070 to drywall, masonry, glass, mullions, and other surfaces. Optional light bar and hallway sign accessories are available to increase the visibility of the room availability status.
- **Reliable**: The TSS-1070 is purpose-built for permanent installation and years of reliable 24/7 operation in a commercial environment. To ensure the latest features are available, the TSS-1070 checks nightly for app updates and loads the latest version automatically.
- Secure: The TSS-1070 employs enterprise-grade networking with robust security features such as 802.1X authentication, TLS encryption, HTTPS connectivity, and Active Directory[®] service integration. These features protect your network against service interruptions and malicious intrusions.

• **Manageable**: The TSS-1070 features cloud-based provisioning and management, which streamlines configuring, monitoring, and updating the touch screen on the network. The TSS-1070 also supports SNMP, so it can be monitored by your IT administrator.

Status Indicator Options

The TSS-1070 provides dual high-speed USB 2.0 ports for connecting Crestron room scheduling accessories (sold separately) to the touch screen that enhance an enterprise room scheduling solution.

- The optional <u>TSW-1070-LB</u> series light bars provide a 180° visual indication of a room's availability status, illuminating green if the room is available and red when reserved, with options for custom color mixing and programming.⁴
- The optional <u>SSW</u>, <u>SSW-EL</u>, <u>SSC</u>, and <u>SSC-EL</u> series hallway signs feature a two sided acrylic sign face that can be custom engraved with the room name or number. The <u>SIW-100</u> offers a lower profile wall mount status indicator.⁴

Bluetooth Beacon

The built-in Bluetooth[®] proximity detection beacon works with the Crestron Go App and Crestron App to determine when a mobile device is in or near the same room as the beacon, and signals the mobile app to automatically display the appropriate controls and information for the room.⁵

Proximity Sensor and Brightness Controls

The TSS-1070 provides a built-in proximity sensor that wakes the screen without requiring any user interaction, and automatic brightness controls ensure optimal visibility under varying lighting conditions.

Power over Ethernet

PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches (<u>CEN-SW-POE-5</u> or <u>CEN-SWPOE-16</u>, sold separately) offer a total networking solution with built-in PoE for multiple touch screens. A PoE Injector (<u>PWE-4803RU</u>, sold separately) is also available to support a single touch screen.

NOTE: PoE+ is required when connecting a light bar or hallway sign via USB. Refer to the "Power" specifications for more details.

XiO Cloud Service

The TSS-1070 is compatible with the XiO Cloud® service, which remotely provisions, monitors, and manages Crestron devices across an enterprise or an entire client base. Built on the Microsoft® Azure® software platform and utilizing Microsoft's Azure IoT Hub technology, XiO Cloud enables installers and IT managers to deploy and manage thousands of devices simultaneously. Unlike other virtual machine-based cloud solutions, Azure services provide unlimited scalability. For more information, visit www.crestron.com/xiocloud.

Wall Mount Options

Using the bracket provided, the TSS-1070 is easily installed over a 2-gang or 3-gang US electrical box, or a 2-gang European or UK electrical box. A security latch option is included to deter unauthorized removal of the touch screen.

Additional wall mounting options are available using the optional <u>TSW-UMB-70</u> universal mounting bracket, <u>TSW-UMB-70-PMK</u> preconstruction mounting kit, and <u>TSW-UMB-70-BBI</u> back box (sold separately).⁶

Optional Mounting Accessories

The TSS-1070 supports numerous optional mounting accessories (sold separately) that allow the touch screen to be installed in all kinds of installations:

- The <u>TSW-1070-MSMK</u> multisurface mount kit allows a TSS-1070 touch screen to be mounted directly to virtually any flat surface, which is ideal for mounting at the entrance to a meeting space for room scheduling applications.
- The <u>TSW-770/1070-MUMK</u> allows the touch screen to be attached to the mullion of an interior glass wall, window, or partition.
- The <u>TSW-770/1070-RMB-1,TSW-770/1070-RMB-2</u>, and <u>TSW-1070-RMB-3</u> retrofit mounting brackets allow for retrofit installations in place of an older Crestron touch screen (APAD, CT-1000, LC-1000, TPS-4L, TPS-6L, or TPS-2000L) without having to tear out the old mounting hardware or patch the wall.
- Thought not typical for most scheduling applications, the <u>TSW-1070-RMK-2</u> rack mount kit can be used to mount the touch screen into a 19 in. rack. When installed, the touch screen occupies four rack spaces.

The TSS-1070 is also compatible with Wall-Smart[®] flush wall mount products via a partnership with Crestron. For more information on supported Wall-Smart hardware, click <u>here</u>.

Notes:

- Actual functionality and on-screen appearance varies based on which scheduling app is in use and how the app is set up. The functionality described in this spec sheet generally refers to the Crestron Scheduling app. Each thirdparty provider determines the functionality and appearance of their respective app. Refer to each provider's website for more information.
- 2. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
- 3. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third-party apps typically run on the TSS-1070 as they do on a tablet device. The TSS-1070 runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TSS-1070. The TSS-1070 cannot be interfaced with a control system and cannot be custom programmed for any other functionality. An internet connection is required.
- 4. The TSS-1070 must be powered by a PoE+ power source when a light bar or hallway sign is connected. Refer to the Accessories section for a list of all available options. Refer to each accessory's spec sheet for further information.
- 5. Bluetooth technology is used solely for proximity detection and does not transmit or receive any control, multimedia, or personal data. Crestron Bluetooth beacons are only visible to Bluetooth enabled devices that are specifically programmed and configured to work with them.
- 6. The TSW-UMB-70 is also compatible with older TSW-UMB-PMK series preconstruction mounting kits and TSW-BBI series back boxes, allowing the TSS-1070 to be installed in place of a previous generation touch screen.

TSS-1070-T Features

Crestron® TSS-1070-T series touch screens are designed to enhance and simplify room scheduling across an enterprise. The TSS-1070-T installs near a meeting room or huddle space to provide a clear indication of its availability and scheduling and integrates seamlessly with the Microsoft Teams® Panels scheduling application.

The TSS-1070-T is sold as part of a kit that includes one <u>TSW-1070-LB</u> series room availability light bar, providing for a complete room scheduling solution out of the box.



Key features include:

- Touch screen designed specifically to run the Microsoft Teams® Panels scheduling application
- Delivers a superior and cost-effective alternative to consumer tablet devices
- 10.1 in. (257 mm) widescreen capacitive touch screen display
- Standard U.S., U.K., and European electrical box installation with additional mounting options available
- Single wire Ethernet connection with PoE or PoE+ power
- Wi-Fi[®] network connectivity
- Dual USB 2.0 ports for room availability accessories
- Enterprise grade security and authentication
- Choice of white or black smooth finish

Microsoft Teams Panels

The native Microsoft Teams Panels scheduling application helps to maximize productivity and manage usage for meeting spaces via Microsoft Teams. The touch screen can be configured to use the Microsoft Teams scheduling calendar, allowing users to book meetings through their Microsoft Teams account. If desired, the room can be reserved on the spot for an ad hoc meeting.^{1,2}

NOTE: For more information on Microsoft Teams Panels, refer to https://docs.microsoft.com/en-us/microsoftteams/devices/teams-panels.

Built for Enterprise Scheduling

The TSS-1070-T is engineered to meet the demands of a corporate office, conference center, or education environment. Its 10.1 in. (257 mm) capacitive display provides an intuitive user interface. A smaller 7 in. (178 mm) version (TSS-770 series) is also available.

- Functional: The TSS-1070-T provides a compact unit for scheduling applications that mounts over a standard electrical box or cutout. The TSS-1070-T offers high-speed Ethernet and PoE/PoE+ connectivity, or, for deployments without access to Ethernet, it can be connected to the network over Wi-Fi[®] communications via a local wireless access point (WAP).
- Versatile: Crestron offers a variety of mounting options for mounting the TSS-1070-T to drywall, masonry, glass, mullions, and other surfaces. Optional light bar and hallway sign accessories are available to increase the visibility of the room availability status.
- **Reliable**: The TSS-1070-T is purpose-built for permanent installation and years of reliable 24/7 operation in a commercial environment. To ensure the latest features are available, the TSS-1070-T checks nightly for app updates and loads the latest version automatically.
- Secure: The TSS-1070-T employs enterprise-grade networking with robust security features such as 802.1X authentication, TLS encryption, HTTPS connectivity, and Active Directory[®] service integration. These features protect your network against service interruptions and malicious intrusions.
- **Manageable**: The TSS-1070-T features cloud-based provisioning and management, which streamlines configuring, monitoring, and updating the touch screen on the network. The TSS-1070-T also supports SNMP, so it can be monitored by your IT administrator.

Status Indicator Options

The TSS-1070-T provides dual high-speed USB 2.0 ports for connecting Crestron room scheduling accessories (sold separately) to the touch screen that enhance an enterprise room scheduling solution.

- The included <u>TSW-1070-LB</u> series light bar provides a 180° visual indication of a room's availability status, illuminating green if the room is available and red when reserved, with options for custom color mixing and programming.³
- The optional <u>SSW</u>, <u>SSW-EL</u>, <u>SSC</u>, and <u>SSC-EL</u> series hallway signs feature a two sided acrylic sign face that can be custom engraved with the room name or number. The <u>SIW-100</u> offers a lower profile wall mount status indicator.³

Bluetooth Beacon

The built-in Bluetooth[®] proximity detection beacon works with the Crestron Go App and Crestron App to determine when a mobile device is in or near the same room as the beacon, and signals the mobile app to automatically display the appropriate controls and information for the room.⁴

Proximity Sensor and Brightness Controls

The TSS-1070-T provides a built-in proximity sensor that wakes the screen without requiring any user interaction, and automatic brightness controls ensure optimal visibility under varying lighting conditions.

Power over Ethernet

PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches (<u>CEN-SW-POE-5</u> or <u>CEN-SWPOE-16</u>, sold separately) offer a total networking solution with built-in PoE for multiple touch screens. A PoE Injector (<u>PWE-4803RU</u>, sold separately) is also available to support a single touch screen.

NOTE: PoE+ is required when connecting a light bar or hallway sign via USB. Refer to the "Power" specifications for more details.

XiO Cloud Service

The TSS-1070-T is compatible with the XiO Cloud® service, which remotely provisions, monitors, and manages Crestron devices across an enterprise or an entire client base. Built on the Microsoft® Azure® software platform and utilizing Microsoft's Azure IoT Hub technology, XiO Cloud enables installers and IT managers to deploy and manage thousands of devices simultaneously. Unlike other virtual machine-based cloud solutions, Azure services provide unlimited scalability. For more information, visit www.crestron.com/xiocloud.

Wall Mount Options

Using the bracket provided, the TSS-1070-T is easily installed over a 2-gang or 3-gang US electrical box, or a 2-gang European or UK electrical box. A security latch option is included to deter unauthorized removal of the touch screen.

Additional wall mounting options are available using the optional <u>TSW-UMB-70</u> universal mounting bracket, <u>TSW-UMB-70-PMK</u> preconstruction mounting kit, and <u>TSW-UMB-70-BBI</u> back box (sold separately).⁵

Optional Mounting Accessories

The TSS-1070-T supports numerous optional mounting accessories (sold separately) that allow the touch screen to be installed in all kinds of installations:

• The <u>TSW-1070-MSMK</u> multisurface mount kit allows a TSS-1070-T touch screen to be mounted directly to virtually any flat surface, which is ideal for mounting at the entrance to a meeting space for room scheduling applications.

- The <u>TSW-770/1070-MUMK</u> allows the touch screen to be attached to the mullion of an interior glass wall, window, or partition.
- The <u>TSW-770/1070-RMB-1,TSW-770/1070-RMB-2</u>, and <u>TSW-1070-RMB-3</u> retrofit mounting brackets allow for retrofit installations in place of an older Crestron touch screen (APAD, CT-1000, LC-1000, TPS-4L, TPS-6L, or TPS-2000L) without having to tear out the old mounting hardware or patch the wall.
- Thought not typical for most scheduling applications, the <u>TSW-1070-RMK-2</u> rack mount kit can be used to mount the touch screen into a 19 in. rack. When installed, the touch screen occupies four rack spaces.

Notes:

- 1. Microsoft determines the functionality and appearance of the Microsoft Teams room scheduling application. Refer to the Microsoft website for more information.
- 2. Additional subscriptions and/or licenses may be required. Refer to the Microsoft website for details about the capabilities and requirements of its scheduling application and services. The TSS-1070-T cannot be interfaced with a control system and cannot be custom programmed for any other functionality. An internet connection is required.
- 3. The TSS-1070-T must be powered by a PoE+ power source when a light bar or hallway sign is connected. Refer to the Accessories section for a list of all available options. Refer to each accessory's spec sheet for further information.
- 4. Bluetooth technology is used solely for proximity detection and does not transmit or receive any control, multimedia, or personal data. Crestron Bluetooth beacons are only visible to Bluetooth enabled devices that are specifically programmed and configured to work with them.
- The TSW-UMB-70 is also compatible with older TSW-UMB-PMK series preconstruction mounting kits and TSW-BBI series back boxes, allowing the TSS-1070-T to be installed in place of a previous generation touch screen.

Physical Description

The TSS-70 Series provides the following connectors and indicators.

TSS-770 and TSS-1070 Series Connectors



Connectors and Indicators

LAN PoE	 (1) 8-pin RJ-45 connector, female, with 2 LED indicators; 100BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(2) USB Type-A connectors, female; USB 2.0 host ports

NOTE: The touch screen supports the use of a single light bar or status indicator accessory.

Specifications

Refer to the following sections for more information on the specifications for various TSS-70 Series models.

- TSS-770 Specifications (on page 21)
- TSS-770-T Specifications (on page 26)
- TSS-1070 Specifications (on page 31)
- TSS-1070-T Specifications (on page 36)

TSS-770 Specifications

Product specifications for the TSS-770 are provided below.

Product Specifications

Room Scheduling Support		
Crestron Scheduling App	Crestron Fusion® software, Microsoft Exchange Server® and Office 365® software, Google Calendar™ calendaring app and G Suite™ software, CollegeNET® 25Live® software, and Ad Astra™ software (IBM® Notes® software	
	is also supported through Crestron Fusion on-premises server only)	
Third-Party Apps	Includes support for various third-party scheduling apps 1,2,3	
Languages		
Crestron Fusion	Chinese (Simplified), Chinese (Traditional), Danish, Dutch (Netherlands), English (US), English (UK), French, German, Hebrew, Italian, Japanese, Korean, Norwegian, Portuguese (Brazil), Portuguese (Portugal), Russian, Spanish, Swedish	
Wired Communications	3	
Ethernet	100 Mbps, auto switching, auto negotiating, auto discovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, HTTPS, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, XiO Cloud® client, IEEE 802.3at compliant	
USB	USB 2.0 host for light bar or hallway sign ⁴	
Wireless Communication	ons	
Transceiver	IEEE 802.11a/b/g/n/ac Wi-Fi (2.4 or 5 GHz 2-way RF), static IP or dynamic IP via DHCP	
Security	64 and 128-bit WEP, WPA and WPA2-PSK with TKIP and AES	
Range	Up to 50 ft (15 m), subject to site-specific conditions	
Bluetooth® Hardware	Crestron Bluetooth beacon ⁵	
Touch Screen Display		
Display Type	TFT active matrix color LCD	
Size	7 in. (178 mm) diagonal	
Aspect Ratio	16:10 WXGA	
Resolution	1280 x 800 pixels	
Brightness	350 nits (cd/m ²)	
Contrast	850:1	

Color Depth	24 bit, 16.7M colors
Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical
Touch Screen	Projected capacitive, 5-point multitouch capable
Buttons	
Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per-button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	Pin hole on rear panel for hardware reset
Audio	
Features	Built-in speakers for touch feedback and alerts
Connectors	
LAN PoE	 (1) 8-pin RJ-45 connector, female, with 2 LED indicators; 100BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(2) USB Type-A connectors, female; USB 2.0 host ports; For optional room scheduling accessories
NOTE: The touch screen	supports the use of a single light bar or status indicator accessory.
Power	
PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Requests 15 W from an 802.3at Type 2 PSE with LLDP advanced power management; Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1) PSE
Environmental	
Temperature	32 to 104°F (0 to 40°C)
Humidity	10% to 95% RH (noncondensing)
Heat Dissipation	44 BTU/hr

Construction	
Housing	Plastic, smooth black or white finish, edge-to-edge glass with black or white surround
Mounting	Surface mount over a 2 or 3-gang US electrical box, 2-gang European (DIN 49073) electrical box, or 2-gang UK (BS 4662) electrical box; Lectern mount over a 2 in. H x 3-3/4 in. W (51 mm H x 96 mm W) cutout; 1-3/8 in. (35 mm) minimum mounting depth; Wall mount, surface mount, and rack options available separately

Dimensions

Height	4.17 in. (106 mm)
Width	6.80 in. (173 mm)
Depth	1.99 in. (51 mm)
Dimensions do not include the mounting bracket or add-on accessories	

Weight

14.11 oz (400 g)

Compliance

Regulatory Model: M201923002

IC, CE, FCC Part 15 Class B digital device

Dimension Drawings



Notes:

- Actual functionality and on-screen appearance varies based on which scheduling app is in use and how the app is set up. The functionality described in this spec sheet generally refers to the Crestron Scheduling app. Each thirdparty provider determines the functionality and appearance of their respective app. Refer to each provider's website for more information.
- 2. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
- 3. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third-party apps typically run on the TSS-770 as they do on a tablet device. The TSS-770 runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TSS-770. The TSS-770 cannot be interfaced with a control system and cannot be custom programmed for any other functionality. An internet connection is required.
- 4. The TSS-770 may be powered by either a PoE or PoE+ power source when a light bar or hallway sign is connected. Refer to the Accessories section for a list of all available options. Refer to each accessory's spec sheet for further information.
- 5. Bluetooth technology is used solely for proximity detection and does not transmit or receive any control, multimedia, or personal data. Crestron Bluetooth beacons are only visible to Bluetooth enabled devices that are specifically programmed and configured to work with them.
- 6. The TSW-UMB-70 is also compatible with older TSW-UMB-PMK series preconstruction mounting kits and TSW-BBI series back boxes, allowing the TSS-770 to be installed in place of a previous generation touch screen.

TSS-770-T Specifications

Product specifications for the TSS-770-T are provided below.

Product Specifications

Room Scheduling Sup	port
Microsoft Teams® Panels	Includes native support for Microsoft Teams Panels scheduling application ^{1,2}
Languages	
Crestron Fusion	Chinese (Simplified), Chinese (Traditional), Danish, Dutch (Netherlands), English (US), English (UK), French, German, Hebrew, Italian, Japanese, Korean, Norwegian, Portuguese (Brazil), Portuguese (Portugal), Russian, Spanish, Swedish
Wired Communicatio	ns
Ethernet	100 Mbps, auto switching, auto negotiating, auto discovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, HTTPS, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, XiO Cloud® client, IEEE 802.3at compliant
USB	USB 2.0 host for light bar or hallway sign ³
Wireless Communicat	cions
Transceiver	IEEE 802.11a/b/g/n/ac Wi-Fi (2.4 or 5 GHz 2-way RF), static IP or dynamic IP via DHCP
Security	64 and 128-bit WEP, WPA and WPA2-PSK with TKIP and AES
Range	Up to 50 ft (15 m), subject to site-specific conditions
Bluetooth® Hardware	Crestron Bluetooth beacon ⁴
Touch Screen Display	
Display Type	TFT active matrix color LCD
Size	7 in. (178 mm) diagonal
Aspect Ratio	16:10 WXGA
Resolution	1280 x 800 pixels
Brightness	350 nits (cd/m ²)
Contrast	850:1
Color Depth	24 bit, 16.7M colors
Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical

Touch Screen	Projected capacitive, 5-point multitouch capable
Buttons	
Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per-button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	Pin hole on rear panel for hardware reset
Audio	
Features	Built-in speakers for touch feedback and alerts
Connectors	
LAN PoE	(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 100BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(2) USB Type-A connectors, female; USB 2.0 host ports; For optional room scheduling accessories
NOTE: The touch scre	een supports the use of a single light bar or status indicator accessory.
Power	
PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Requests 15 W from an 802.3at Type 2 PSE with LLDP advanced power management; Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1) PSE
Environmental	
Temperature	41 to 104°F (5 to 40°C)
Humidity	10% to 90% RH (noncondensing)
Heat Dissipation	49 BTU/hr

Construction	
Housing	Plastic, smooth black or white finish, edge-to-edge glass with black or white surround
Mounting	Surface mount over a 2 or 3-gang US electrical box, 2-gang European (DIN 49073) electrical box, or 2-gang UK (BS 4662) electrical box; Lectern mount over a 2 in. H x 3-3/4 in. W (51 mm H x 96 mm W) cutout; 1-3/8 in. (35 mm) minimum mounting depth; Wall mount, surface mount, and rack options available separately

Dimensions

Height	4.17 in. (106 mm)
Width	7.30 in. (185 mm)
Depth	2.26 in. (57 mm)
Dimensions do not include the mounting bracket or add-on accessories	

Weight

14.11 oz (400 g)

Compliance

Regulatory Model: M201923002

IC, CE, FCC Part 15 Class B digital device

Dimension Drawings



Notes:

- 1. Microsoft determines the functionality and appearance of the Microsoft Teams room scheduling application. Refer to the Microsoft website for more information.
- Additional subscriptions and/or licenses may be required. Refer to the Microsoft website for details about the capabilities and requirements of its scheduling application and services. The TSS-770-T cannot be interfaced with a control system and cannot be custom programmed for any other functionality. An internet connection is required.
- 3. The TSS-770-T may be powered by either a PoE or PoE+ power source when a light bar or hallway sign is connected. Refer to the Accessories section for a list of all available options. Refer to each accessory's spec sheet for further information.
- 4. Bluetooth technology is used solely for proximity detection and does not transmit or receive any control, multimedia, or personal data. Crestron Bluetooth beacons are only visible to Bluetooth enabled devices that are specifically programmed and configured to work with them.
- The TSW-UMB-70 is also compatible with older TSW-UMB-PMK series preconstruction mounting kits and TSW-BBI series back boxes, allowing the TSS-770-T to be installed in place of a previous generation touch screen.

TSS-1070 Specifications

Product specifications for the TSS-1070 are provided below.

Product Specifications

Room Scheduling Support		
Crestron Scheduling App	Crestron Fusion® software, Microsoft Exchange Server® and Office 365® software, Google Calendar™ calendaring app and G Suite™ software, CollegeNET® 25Live® software, and Ad Astra™ software (IBM® Notes® software is also supported through Crestron Fusion on-premises server only)	
Third-Party Apps	Includes support for various third-party scheduling apps ^{1,2,3}	
Languages		
Crestron Fusion	Chinese (Simplified), Chinese (Traditional), Danish, Dutch (Netherlands), English (US), English (UK), French, German, Hebrew, Italian, Japanese, Korean, Norwegian, Portuguese (Brazil), Portuguese (Portugal), Russian, Spanish, Swedish	
Wired Communications	5	
Ethernet	100 Mbps, auto switching, auto negotiating, auto discovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, HTTPS, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, XiO Cloud® client, IEEE 802.3at compliant	
USB	USB 2.0 host for light bar or hallway sign ⁴	
Wireless Communicatio	ons	
Transceiver	IEEE 802.11a/b/g/n/ac Wi-Fi (2.4 or 5 GHz 2-way RF), static IP or dynamic IP via DHCP	
Security	64 and 128-bit WEP, WPA and WPA2-PSK with TKIP and AES	
Range	Up to 50 ft (15 m), subject to site-specific conditions	
Bluetooth® Hardware	Crestron Bluetooth beacon ⁵	
Touch Screen Display		
Display Type	TFT active matrix color LCD	
Size	10.1 in. (257 mm) diagonal	
Aspect Ratio	16:10 WUXGA	
Resolution	1920 x 1200 pixels	
Brightness	400 nits (cd/m ²)	
Contrast	1000:1	
Color Depth	24 bit, 16.7M colors	

Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical
Touch Screen	Projected capacitive, 5-point multitouch capable
Buttons	
Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per-button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	Pin hole on rear panel for hardware reset
Audio	
Features	Built-in speakers for touch feedback and alerts
Connectors	
LAN PoE	(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 100BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(2) USB Type-A connectors, female; USB 2.0 host ports; For optional room scheduling accessories
NOTE: The touch so	reen supports the use of a single light bar or status indicator accessory.
Power	
PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Normally requests 15 W from an 802.3at Type 2 PSE with LLDP advanced power management; With room scheduling and USB enabled, requests 18 W from an 802.3at Type 2 PSE with LLDP; Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1) PSE

NOTE: Enabling the USB port requires use of an 802.3at Type 2 PoE+ PSE.
Environmental	
Temperature	32 to 104°F (0 to 40°C)
Humidity	10% to 95% RH (noncondensing)
Heat Dissipation	44 BTU/hr
Construction	
Housing	Plastic, smooth black or white finish, edge-to-edge glass with black or white surround
Mounting	Surface mount over a 2 or 3-gang US electrical box, 2-gang European (DIN 49073) electrical box, or 2-gang UK (BS 4662) electrical box; Lectern mount over a 2 in. H x 3-3/4 in. W (51 mm H x 96 mm W) cutout; 1-3/8 in. (35 mm) minimum mounting depth; Wall mount, surface mount, and rack options available separately
Dimensions	
Height	5.87 in. (149 mm)
Width	9.46 in. (240 mm)
Depth	2.01 in. (51 mm)
Dimensions do not inc	clude the mounting bracket or add-on accessories
Weight	

1.61 lb (730 g)

Compliance

Regulatory Model: M201923003 IC, CE, FCC Part 15 Class B digital device

Dimension Drawings



Notes:

- Actual functionality and on-screen appearance varies based on which scheduling app is in use and how the app is set up. The functionality described in this spec sheet generally refers to the Crestron Scheduling app. Each thirdparty provider determines the functionality and appearance of their respective app. Refer to each provider's website for more information.
- 2. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
- 3. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third-party apps typically run on the TSS-1070 as they do on a tablet device. The TSS-1070 runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TSS-1070. The TSS-1070 cannot be interfaced with a control system and cannot be custom programmed for any other functionality. An internet connection is required.
- 4. The TSS-1070 must be powered by a PoE+ power source when a light bar or hallway sign is connected. Refer to the Accessories section for a list of all available options. Refer to each accessory's spec sheet for further information.
- 5. Bluetooth technology is used solely for proximity detection and does not transmit or receive any control, multimedia, or personal data. Crestron Bluetooth beacons are only visible to Bluetooth enabled devices that are specifically programmed and configured to work with them.
- 6. The TSW-UMB-70 is also compatible with older TSW-UMB-PMK series preconstruction mounting kits and TSW-BBI series back boxes, allowing the TSS-1070 to be installed in place of a previous generation touch screen.

TSS-1070-T Specifications

Product specifications for the TSS-1070-T are provided below.

Product Specifications

Room Scheduling Sup	port	
Microsoft Teams® Panels	Includes native support for Microsoft Teams Panels scheduling application ^{1,2}	
Languages		
Crestron Fusion	Chinese (Simplified), Chinese (Traditional), Danish, Dutch (Netherlands), English (US), English (UK), French, German, Hebrew, Italian, Japanese, Korean, Norwegian, Portuguese (Brazil), Portuguese (Portugal), Russian, Spanish, Swedish	
Wired Communication	ns	
Ethernet	100 Mbps, auto switching, auto negotiating, auto discovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, HTTPS, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, XiO Cloud® client, IEEE 802.3at compliant	
USB	USB 2.0 host for light bar or hallway sign ³	
Wireless Communicat	ions	
Transceiver	IEEE 802.11a/b/g/n/ac Wi-Fi (2.4 or 5 GHz 2-way RF), static IP or dynamic IP via DHCP	
Security	64 and 128-bit WEP, WPA and WPA2-PSK with TKIP and AES	
Range	Up to 50 ft (15 m), subject to site-specific conditions	
Bluetooth® Hardware	Crestron Bluetooth beacon ⁴	
Touch Screen Display		
Display Type	TFT active matrix color LCD	
Size	10.1 in. (257 mm) diagonal	
Aspect Ratio	16:10 WUXGA	
Resolution	1920 x 1200 pixels	
Brightness	400 nits (cd/m ²)	
Contrast	1000:1	
Color Depth	24 bit, 16.7M colors	
Illumination	Edgelit LED with auto brightness control	
Viewing Angle	±80° horizontal, ±80° vertical	

Projected capacitive, 5-point multitouch capable
(6) Virtual buttons in collapsible universal tool bar, per-button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Pin hole on rear panel for hardware reset
Built-in speakers for touch feedback and alerts
(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 100BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
(2) USB Type-A connectors, female; USB 2.0 host ports; For optional room scheduling accessories
supports the use of a single light bar or status indicator accessory.
IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Normally requests 15 W from an 802.3at Type 2 PSE with LLDP advanced power management; With room scheduling and USB enabled, requests 18 W from an 802.3at Type 2 PSE with LLDP; Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1) PSE NOTE: Enabling the USB port requires use of an 802.3at Type 2 PoE+ PSE.

Environmental	
Temperature	41 to 104°F (5 to 40°C)
Humidity	10% to 90% RH (noncondensing)
Heat Dissipation	49 BTU/hr
Construction	
Housing	Plastic, smooth black or white finish, edge-to-edge glass with black or white surround
Mounting	Surface mount over a 2 or 3-gang US electrical box, 2-gang European (DIN 49073) electrical box, or 2-gang UK (BS 4662) electrical box; Lectern mount over a 2 in. H x 3-3/4 in. W (51 mm H x 96 mm W) cutout; 1-3/8 in. (35 mm) minimum mounting depth; Wall mount, surface mount, and rack options available separately
Dimensions	
Height	5.87 in. (149 mm)
Width	10.18 in. (259 mm)
Depth	2.28 in. (58 mm)
Dimensions do not inc	clude the mounting bracket or add-on accessories
Weight	

1.61 lb (730 g)

Compliance

Regulatory Model: M201923003 IC, CE, FCC Part 15 Class B digital device

Dimension Drawings



Notes:

- 1. Microsoft determines the functionality and appearance of the Microsoft Teams room scheduling application. Refer to the Microsoft website for more information.
- 2. Additional subscriptions and/or licenses may be required. Refer to the Microsoft website for details about the capabilities and requirements of its scheduling application and services. The TSS-1070-T cannot be interfaced with a control system and cannot be custom programmed for any other functionality. An internet connection is required.
- 3. The TSS-1070-T must be powered by a PoE+ power source when a light bar or hallway sign is connected. Refer to the Accessories section for a list of all available options. Refer to each accessory's spec sheet for further information.
- 4. Bluetooth technology is used solely for proximity detection and does not transmit or receive any control, multimedia, or personal data. Crestron Bluetooth beacons are only visible to Bluetooth enabled devices that are specifically programmed and configured to work with them.
- The TSW-UMB-70 is also compatible with older TSW-UMB-PMK series preconstruction mounting kits and TSW-BBI series back boxes, allowing the TSS-1070-T to be installed in place of a previous generation touch screen.

Installation

Use the following procedures to install the TSS-770 and TSS-1070 touch screens.

Install the Mounting Bracket

The TSS-770 and TSS-1070 install over a standard 2-gang or 3-gang U.S. electrical box, a 2-gang European electrical box, or a 2-gang U.K. electrical box. The touch screen also installs into drywall.

NOTES:

- Additional mounting options are possible using the following mounting accessories. For more information, refer to the product pages at <u>www.crestron.com</u>.
 - TSW-UMB-70 universal mounting bracket
 - TSW-UMB-70-PMK preconstruction mounting kit
 - TSW-UMB-70-BBI wall mount back box
 - TSW-770/1070-MSMK series multisurface mounting kits
 - TSW-770/1070-MUMK mullion mounting kit
 - TSW-770/1070-RMB series retrofit mounting brackets
 - TSW-770/1070-RMK series rack mount kits
- Installing the mounting bracket to an electrical box is required only if one of the mounting solutions above is not used. Refer to the documentation for your chosen mounting solution at www.crestron.com/manuals.

Electrical Box Mounting

To mount the touch screen into an electrical box, use the appropriate screws (four $6-32 \times 3/4$ in. screws, four M3 x 16 mm screws, or two M3.5 x 25 mm screws) to attach the mounting bracket to the electrical box as shown in the following illustrations:

NOTE: For U.S. installations, use a #2 Phillips screwdriver. For European or U.K. installations, use a #1 Phillips screwdriver.

• For U.S. installations, use the four 6-32 x 3/4 in. screws.



• For European installations, use the four M3 x 16 mm screws.



• For U.K. installations (not pictured), use the two M3.5 x 25 mm screws to attach the mounting bracket to the electrical box. Insert the screws through the center openings in the left and right sides of the mounting bracket.

Drywall Mounting

Mounting hardware is provided with the touch screen for drywall installations without an electrical box. Using this hardware will ensure that the bracket is completely flush with the touch screen to provide maximum magnetic force.

To install the mounting bracket into drywall:

- 1. Using the inside of the mounting bracket as a template, cut a $2-1/8 \times 3-5/8$ in. (54 x 92 mm) hole into the drywall. Ensure the template is level prior to cutting the hole.
- 2. Align the mounting bracket with the cutout and ensure it is level.
- 3. Use one of the anchors to make a center mark in the drywall through the four 2-gang openings in the template. Refer to the image below for the required mounting holes.
- 4. Screw the four anchors into the drywall using the center marks as a reference.

5. Attach the mounting bracket to the anchors using the four 6-AB x 1 in. screws as shown in the image below.



Install the Security Bracket (Optional)

The included security bracket may be attached to the touch screen to prevent unauthorized removal after installation. The security bracket snaps into place behind the mounting bracket so that the touch screen cannot be removed without using the included release key.

Use the two M2 x 4 mm screws to attach the security bracket to the touch screen rear housing as shown in the following illustration.



To remove the touch screen after installation, use the included release key to push down on the security bracket release tabs as shown in the following illustration while gently pulling the touch screen away from the mounting bracket.



Connect the Touch Screen

Route all necessary cables through the rear of the mounting bracket, and then make connections to the side of the touch screen rear housing.



Observe the following when connecting the touch screen:

- Power and data connection is provided to the touch screen by a single Ethernet cable. A Crestron PoE (Power over Ethernet) power supply, such as the <u>PWE-4803RU</u>, or a PoE-capable network switch is recommended (neither included).
- The USB ports are used to connect compatible Crestron LED accessories to the touch screen.

NOTE: The TSS-770 may use either PoE or PoE+ to supply power to compatible LED accessories over USB; the TSS-1070 requires at minimum PoE+ to supply power to LED accessories over USB.

• Apply power after all connections have been made.

Mount the Touch Screen

After all connections have been made, push the touch screen gently into the mounting bracket so that its rear housing is secured within the center opening of the mounting bracket.



If the touch screen is not level after installation, pull it out of the mounting bracket and loosen the screws holding the bracket into place. This procedure allows the mounting bracket to be rotated slightly.

Once the mounting bracket has been repositioned, retighten the screws, reinstall the touch screen into the bracket, and ensure that the touch screen is now level.

NOTE: To clean or disinfect a touch screen display, use a soft, clean, damp (not wet) cloth with any commercially available non-ammonia glass cleaner or disinfectant cleaner. Bezels do not provide a complete watertight seal, so apply cleaning solution to the cloth rather than the surface of the touch screen. Wipe the touch screen clean and avoid ingress of moisture beneath the bezels.

Configure the Touch Screen

When power is applied for the first time, the touch screen boots with the Crestron room scheduling application selected by default. The touch screen may take up to two minutes to boot.



Device settings for the touch screen may be configured using the built-in setup screens or the web configuration interface. For more information on configuring the touch screen, refer to Configuration (on page 51).

NOTE: The touch screen included in the TSS-770-T-LB or TSS-1070-T-LB kits boots to the Microsoft Teams Panels scheduling application setup screen by default. To access the device setup screens, refer to Access the Device Setup Screens on the adjacent column. To configure the application, refer to Installation (on page 40).

Access the Device Setup Screens

To access the built-in setup screens, place five fingers on the display and hold for 15 seconds. The main Setup screen is displayed (TSS-770 shown).



Use the setup screens to configure various settings for the touch screen, including Ethernet setup, scheduling application selection, Wi-Fi network setup, and diagnostics.

Access the Web Configuration Interface

The touch screen provides a web configuration interface that is used to view and configure various touch screen settings and to select a scheduling application. The interface can be accessed using the touch screen IP address or the XiO Cloud® service.

Touch Screen IP Address

To access the web configuration interface using the touch screen IP address:

- 1. Ensure that the touch screen is connected to the network.
- 2. Use the Device Discovery tool in Crestron Toolbox[™] software to discover the touch screen and its IP address on the network.
- 3. Enter the touch screen IP address into a web browser.

XiO Cloud Service

The <u>XiO Cloud[®] service</u> allows supported devices across an enterprise to be managed and configured from one central and secure location in the cloud. Supported Crestron[®] devices are configured to connect to the service out of the box.

Use of the service requires a registered XiO Cloud account. To register for an XiO Cloud account, refer to www.crestron.com/Support/Tools/Licensing-Registration/XiO-Cloud-Registration-Room-Licenses.

NOTE: The device may be disconnected from the XiO Cloud service by navigating to the Cloud Services tab in Crestron Toolbox[™] software (Functions > Device Info > Cloud Services). For details, refer to the Crestron Toolbox help file.

To connect the device to the XiO Cloud service:

 Record the MAC address and serial number that are labeled on the shipping box or the device. The MAC address and serial number are required to add the device to the XiO Cloud service.

NOTE: If the device has multiple MAC addresses, use the MAC address that is providing the primary connection back to the network. For most devices, the Ethernet MAC address should be used. However, if your device is connecting to the network over a different protocol (such as Wi-Fi[®] communications), use the MAC address for that protocol instead.

- 2. Log in to your XiO Cloud account at portal.crestron.io.
- 3. Claim the device to the XiO Cloud service as described in the XiO Cloud User Guide.

Select the device from the cloud interface to view its status and settings. The device may now also be managed and assigned to a group or room. For more information, refer to the XiO Cloud User Guide.

NOTE: For XiO Cloud accounts with room-based licenses, the device must be added to a licensed room before its status and settings can be viewed.

Create an Admin Account

The first time the web configuration interface is accessed, a page is displayed asking the user to create an admin account. A similar message is displayed when connecting to the control system in Crestron Toolbox software if an admin account has not already been created.

To create an admin account:

1. Enter a username and password for the admin account in the appropriate text fields.

CAUTION: Do not lose the username and password for the admin account, as the control system must be reset to factory settings to regain access.

- 2. Select **OK** to create the admin account. The web configuration interface refreshes to show the standard login page.
- 3. Reenter the credentials created in step 1 and select Sign In.

NOTE: The username and password must also be entered when connecting from Crestron Toolbox or XPanel.

Set the Time Zone

The time zone must be set on the touch screen prior to selecting a scheduling application.

To set the time zone:

- 1. Access the web configuration interface using either the touch screen IP address or the XiO Cloud service.
- 2. Select the **Settings** tab.
- 3. Navigate to **System Setup > Time/Date**.
- 4. Select the time zone where the touch screen will be used from the **Time Zone** drop-down menu.
- 5. Select **Save Changes** on the top right of the screen.

Select an Application

The touch screen ships with various built-in scheduling applications. An application may be selected from the web configuration interface.

The touch screen included in the TSS-770-T-LB or TSS-1070-T-LB kits runs the Microsoft Teams Panels scheduling application by default. Other supported applications can be configured to run on the touch screen through the local or web configuration interfaces.

NOTE: Applications can be selected and configured from the device setup screens or from the web configuration interface at any time. For more information, refer to Application Selection (on page 108).

To select a touch screen application:

- 1. Enter the touch screen IP address into a web browser to access the web configuration interface.
- 2. Navigate to Settings > Applications.
- 3. Select the desired scheduling provider from the **Application Mode** drop-down menu.
- 4. If necessary, enter any additional information (such as a registration URL) that is required for connecting to the scheduling provider.
- 5. Select **Save Changes** on the top right of the screen.
- 6. When prompted, restart the touch screen. The touch screen restarts with the selected scheduling mode running.

An application may also be selected using the **Application Selection** function on the main device Setup screen.

Configure Microsoft Teams Panels

The touch screen included in the TSS-770-T-LB or TSS-1070-T-LB kits ships with the Microsoft Teams Panels scheduling application running out of the box, with the **Language Selection** screen displayed upon initial boot. The application must be configured prior to use.

NOTE: A Microsoft Teams account is required for configuration. Refer to your IT administrator for assistance.

To set up the Microsoft Teams Panels scheduling application on the touch screen:

1. Select a language for the application on the Language Selection screen.

Lang Currer	guage Selection Int system language: English (United States)	Next
	Dansk	
	Deutsch	
	English (United States)	
	Español	
	Français (France)	
	Italiano	
	Magyar	

2. Tap Next. The Time Zone Selection screen is displayed.

Time Curren	e Zone Selection nt system time zone: UTC	Next
\bigcirc	America/Mexico_City	
	Pacific/Easter	
	America/Havana	
\bigcirc	America/New_York	
	America/Cancun	
	America/Port-au-Prince	
	America/Bogota	

3. Select the time zone that will be used by the application on the **Time Zone Selection** screen.



4. Tap Next. A Microsoft Teams sign in screen is displayed.

- 5. Tap Sign In.
- 6. Enter your Microsoft Teams username and password when prompted.
- 7. If two-factor authentication is enabled by your organization, follow the prompts provided to authenticate with the application.

Upon successful sign in, the scheduling calendar for your organization is displayed.

For more information on using Microsoft Teams, refer to <u>https://support.microsoft.com/en-us/teams</u>.

Configuration

Prior to configuration, ensure the device is running the latest firmware. To update the firmware, refer to Update Firmware (on page 76).

When power is applied for the first time, the touch screen boots with the Crestron room scheduling application selected by default. The touch screen may take up to two minutes to boot.

		Thursc	day, June 07, 2018	10:14 AM
NOON				
A	Calendar Offline Please check configura	tion		i

Place five fingers on the display and hold for 20 seconds to display the main Setup screen (TSS-770 shown).

	TSS-770 Setup				
IP Address: 192.168.24.202 Hostname: TSS-770-00107FE4C691 MAC Address: 00:10:7f:e4:c6:91					
	Ethernet Setup	WiFi Setup	Application Selection	Diagnostics	About
ź	<u>}</u>				Save & Exit

Device settings for the touch screen may be configured using the built-in setup screens or the web configuration interface.

- To configure the device using the built-in setup screens, refer to Local Configuration (on page 53).
- To configure the device using the web configuration interface, refer to Web Configuration (on page 74).

Local Configuration

Refer to the following sections for information about configuring the device locally using its built-in setup screens.

Access the Setup Screens

The setup screens enable basic configuration prior to regular operation of the touch screen.

To access the touch screen's built-in setup screens during regular operation, place five fingers on the display and hold for 15 seconds.

The main Setup screen is displayed (TSS-770 shown).

TSS-770 Setup Screen



The Setup screen shows the IP address and host name of the touch screen and provides the following configuration selections:

- Buttons for Ethernet setup, application selection, Wi-Fi® network setup, diagnostics, Bluetooth® beacon configuration, and the virtual toolbar.
- An **About** button that provides information about the touch screen.

The functions of each button are detailed in the following sections.

NOTE: A toolbar is present on the bottom of all setup screens. The toolbar provides a gear button 🔯 that may be tapped to return to the Setup screen and a **Save & Exit** button that may be tapped to save all settings, to exit the setup screens, and to return to the selected scheduling application.

Ethernet Setup

Tap **Ethernet Setup** on the Setup screen to display the **Ethernet Setup** screen.

Ethernet Setup Screen



Use the Ethernet Setup screen to view the touch screen MAC and IP addresses, subnet mask address, default router address, primary and secondary DNS addresses, host name, and domain. A **Link** indicator is provided to indicate the status of the Ethernet connection. (Green indicates that the Ethernet connection is active.)

The following buttons are provided for configuring Ethernet settings:

- Tap **On** or **Off** under **LAN Access** to turn the Ethernet adapter on or off. If **LAN Access** is set to **Off**, Ethernet will not function and a Wi-Fi connection can be established.
- Tap On or Off under DHCP Enable to turn DHCP (dynamic host configuration protocol) on or off.

NOTE: DHCP is turned on by default.

- If DHCP is turned off, tap **Set Static IP Address Settings** to enter static IP addresses manually.
- Tap **Set Hostname** to enter a new touch screen host name using an on-screen keyboard.
- Tap **APPLY CHANGES** to apply any new Ethernet settings to the touch screen and to stay in setup mode.
- Tap **REBOOT** to exit setup mode and restart the touch screen.

To change a static IP address, tap **Off** under **DHCP Enable**. Then, tap **Set Static IP Address Settings** to display the **Static IP Ethernet Setup** screen.

Static IP Ethernet Setup Screen

< васк Static II	P Ethernet Setup Apply Changes Reboot			
То	Touch a Setting to Edit			
Static IP address	Preferred DNS			
0.0.0.0	0.0.0.0			
Static Subnet Mask	Alternate Preferred DNS			
0.0.00	0.0.0.0			
Static Default Router				
0.0.00				
ن	Save & Exit			

To edit the static IP address, the static subnet mask, the static default router, the preferred DNS, or the alternate preferred DNS, tap the text field underneath the setting name.

The on-screen numeric keypad opens for the chosen setting.

Edit IP Address On-Screen Numeric Keypad



- Use the keypad to make a new entry.
- Tap the clear button imes in the text field to clear any previous entry.
- Tap the delete button 🛞 to delete the last digit.
- Tap **Save** to save a new entry or tap **< CANCEL** to discard any changes. The display returns to the **Static IP Ethernet Setup** screen.

After new settings have been saved, tap **APPLY CHANGES** on the **Static IP Ethernet Setup** screen to apply the new settings and stay in setup mode. Tap **REBOOT** to exit setup mode and restart the touch screen.

Tap < BACK to return to the Ethernet Setup screen.

Tap < BACK on the Ethernet Setup screen to return to the Setup screen.

Application Selection

Tap Application Selection on the Setup screen to display the Application Setup screen.

Application Setup Screen

< BACK	Applicatio	on Selection	
	Current App Selection:		
	Us Cres	ron Default	
	Cres	tron Home	
	A	ppspace	
	AskCody		
	EMS		
	Gingco		
		· · · · · · · · · · · · · · · · · · ·	
	Cancel	Confirm Selection (Action will reboot device)	
£		Save & Exit	

Use the **Application Selection** screen to select a scheduling application from the available selections. Swipe up or down through the list, and then tap an application to select it. Tap **Confirm Selection** to confirm the selection or tap **Cancel** to return to the previous screen. Once confirmed, the touch screen restarts with the new application running.

NOTE: Each application uses a unique setup procedure for registering and configuring the application. For more information on setting up each application, refer to Application Selection (on page 108).

Tap < BACK to return to the Setup screen.

Wi-Fi Setup

Tap Wi-Fi Setup on the Setup screen to display the Wi-Fi Setup screen.

Wi-Fi Setup Screen



Use the Wi-Fi Setup screen to view the Wi-Fi network MAC and IP addresses, subnet mask address, default router address, primary and secondary DNS addresses, host name, domain, and various details about the Wi-Fi connection. A **Link** indicator is provided to indicate the status of the Wi-Fi connection. (Green indicates that the Wi-Fi connection is active.)

NOTE: Ethernet must be disabled before a Wi-Fi connection can be configured.

The following buttons are provided for configuring Wi-Fi settings:

- Tap **On** or **Off** under **Wi-Fi Access** to turn the Wi-Fi adapter on or off. If **Wi-Fi Access** is set to **Off**, Wi-Fi will not function and an Ethernet connection can be established.
- Tap **On** or **Off** under **DHCP Enable** to turn DHCP (dynamic host configuration protocol) on or off.

NOTE: DHCP is enabled on the touch screen by default.

- If DHCP is turned off, tap **Set Static IP Address Settings** to enter static IP addresses manually.
- Tap Set Hostname to enter a new touch screen host name using an on-screen keyboard.
- Tap **APPLY CHANGES** to apply any new Wi-Fi settings to the touch screen and to stay in setup mode.
- Tap **REBOOT** to exit setup mode and restart the touch screen.

To change a static IP address, tap **Off** under **DHCP Enable**. Then, tap **Set Static IP Address Settings** to display the **Wi-Fi Static IP Setup** screen.

Wi-Fi Static IP Setup Screen



To edit the static IP address, the static subnet mask, the static default router, the preferred DNS, or the alternate preferred DNS, tap the text field underneath the setting name.

The on-screen numeric keypad opens for the chosen setting.

Edit IP /	Address	On-Screen	Numeric	Keypad
-----------	---------	-----------	---------	--------



- Use the keypad to make a new entry.
- Tap the clear button imes in the text field to clear any previous entry.
- Tap the delete button 🛞 to delete the last digit.
- Tap **Save** to save a new entry or tap **< CANCEL** to discard any changes. The display returns to the **Static IP Ethernet Setup** screen.

After new settings have been saved, tap **APPLY CHANGES** on the **WiFi Static IP Setup** screen to apply the new settings and stay in setup mode. Tap **REBOOT** to exit setup mode and restart the touch screen.

Tap < BACK to return to the Wi-Fi Setup screen.

Tap < BACK on the Wi-Fi Setup screen to return to the Setup screen.

Select a Wi-Fi Access Point

On the Wi-Fi Setup screen, tap Select Wi-Fi Access Point. The Connect to a Wi-Fi Access Point (1-2-3) screen is displayed.

Connect to a Wi-Fi Access Point (1-2-3) Screen

< BACK	Connect to a	WiFi Access Point(1-2-3)	
	Step 1 - Select a WAP	Step 2 - Touch to Edit WAP Settings	
	Add new Ian's Guest Network	WAP Name (SSID):	
		Coouvitry.	
		Security:	
		Open	
		Password:	
		Step 3 - Make this my Access Point	
	(Updates within 30 seconds)		
		Save & Ex	<u>cit</u>

Use the **Connect to a Wi-Fi Access Point (1-2-3)** screen to connect the touch screen to an existing WAP that is in range or to configure a new WAP. Any WAPs that are in range and discoverable are displayed under **Step 1 - Select a WAP** upon successful discovery.

To set up a Wi-Fi network connection:

1. Select the desired WAP from the options shown underneath **Step 1 - Select a WAP**. If the desired WAP is not shown, tap **Add New**.

NOTE: The **WAP Name (SSID)** and **Security** fields are populated automatically when a discovered WAP is selected. This information must be entered manually when adding a new WAP.

- 2. Tap the **WAP Name (SSID)** text field to display an on-screen keyboard.
- 3. Enter or modify the WAP name if necessary, and then tap SAVE.
- Tap the Security text field to display the Wi-Fi Encryption Settings screen.
 Wi-Fi Encryption Settings



- 5. Tap the appropriate encryption type used by the WAP, and then tap < **BACK**.
- 6. Tap the **Password** text field to display an on-screen keyboard.
- 7. Enter the password used to connect to the WAP, and then tap **SAVE**.
- 8. Tap Step 3 Make this my Access Point. The Wi-Fi WAP Selection screen is displayed.

The touch screen attempts to connect to the WAP using the provided credentials. If a connection is established, connection details for the WAP are shown with a green check mark to the left of **Current Connection**.

Wi-Fi WAP Selection Screen (Connection Successful)

< BACK					
(Current Connection: Ian's Guest Network IP Address: 172.16.42.172 BSSID: ba:c7:5d:07:f7:ba Radio Band: G 				
		Connect to a different access point			
ŝ			Save & Exit		

If the connection fails, a failure message is displayed. Tap **Connect to a different access point** to return to the **Connect to a Wi-Fi Access Point (1-2-3)** screen.

NOTE: If four WAPs have already been assigned, the **Wi-Fi WAP Selection** screen indicates that the WAP list is full. Tap **Delete an access point?** to display the **Manage Wi-Fi Access Points** screen, where an existing WAP may be deleted, or tap < BACK to cancel adding the new WAP. For more information, refer to Manage Wi-Fi Access Points (on the facing page).

Tap < BACK to return to the Wi-Fi Setup screen.

Manage Wi-Fi Access Points

On the **Wi-Fi Setup** screen, tap **Manage Wi-Fi Access Point**. The **Manage Wi-Fi Access Points** screen is displayed.

< BACK	Manage WiFi Access Points						
	9	Select a WAP					
	Hammons1						
				Delete this			
				Accession			
£63					V S	ave & E	
~~~~					<u> </u>	uve d L	

#### Manage Wi-Fi Access Points Screen

Use the **Manage Wi-Fi Access Points** screen to manage settings for up to four saved WAPs. Tap one of the listed WAPs to display controls to manage the WAP.

Tap **Delete this Access Point** to delete the selected WAP. If a WAP is deleted, it must be added back to the list using the procedures described in Select a Wi-Fi Access Point (on page 60).

Tap < BACK to return to the Wi-Fi Setup screen.

## **Bluetooth Beacon**

Tap **BLE Beacon** on the Setup screen to display the **BLE Beacon** screen.

#### BLE Beacon Screen



Use the **BLE Beacon** screen to configure the built-in PinPoint[™] proximity detection beacon. Using Bluetooth[®] technology, the beacon works with the Crestron App or Crestron PinPoint App to determine when a mobile device is in or near the same room as the beacon, and signals the mobile app to automatically display the appropriate controls and information for the room.

- Tap **On** or **Off** underneath **BLE Beacon** to turn the proximity beacon on or off, respectively.
- Tap **On** or **Off** underneath **Config Mode** to turn configuration mode on or off, respectively. Turning on configuration mode enables the proximity beacon to be configured.

**NOTE:** The proximity beacon and configuration mode cannot both be turned on at the same time.

Tap < BACK to return to the Setup screen.

## Virtual Toolbar

Tap Virtual Toolbar on the Setup screen to display the On-screen Toolbar screen.

#### On-screen Toolbar Screen



Use the **On-screen Toolbar** screen to configure settings for the virtual toolbar. By default, the virtual toolbar can be accessed by swiping down on the tab located at the top of the screen and provides virtual buttons for power, home, lighting, up, down, and microphone. The toolbar is hidden automatically after a set timeout duration.

**NOTE:** Virtual button functionality can be custom programmed using a Crestron control system.

#### On-screen Toolbar Screen (with Virtual Toolbar)



- Tap **On** or **Off** under **Toolbar Enabled** to turn the virtual toolbar on or off, respectively.
- Tap **Show** or **Hide** under **Toolbar Visibility** to have the toolbar exposed or hidden by default, respectively.
- Tap **Top**, **Bottom**, **Left**, or **Right** under **Toolbar Positioning** to place the toolbar on the respective location on the screen.
- Tap the up and down arrow buttons under **Toolbar Autohide Timeout** to increase or decrease the duration before the toolbar is automatically hidden from 0 to 600 seconds. Selecting "0" disables this behavior.
- Tap the button under **Toolbar Theme** to switch between a light and dark theme. The currently selected theme is displayed on the button.
- Tap **Toolbar Buttons** to display a screen for showing or hiding individual buttons in the virtual toolbar. Tap **On** or **Off** next to a button to show or hide the button, respectively.





Tap < BACK to return to the Setup screen.

## **Diagnostics & Advanced**

Tap Diagnostics on the Setup screen to display the Diagnostics & Advanced screen.

### Diagnostics & Advanced Screen



Use the **Diagnostics & Advanced** screen to access various diagnostic test screens for the touch screen. The **Diagnostics & Advanced** screen also provides the touch screen CPU temperature and available memory.

Each test screen is described in the sections that follow.
# Test Patterns

Tap **Test Patterns** on the **Diagnostics & Advanced** screen to display the **Test Pattern Diagnostics** screen.

#### **Test Pattern Diagnostics Screen**



Use the **Test Pattern Diagnostics** screen to display any of the available test patterns. Tap one of the buttons on the screen to display its respective test pattern.

Tap < BACK to return to the Diagnostics & Advanced screen.

# **Touch Test**

Tap **Touch Test** on the **Diagnostics & Advanced** screen to display the touch test screen.

#### Touch Test Screen



Use the touch test screen to test the touch functionality of the display. When a location button is tapped, its respective indicator lights on the screen.

Tap **RETURN** to return to the **Diagnostics & Advanced** screen.

# LAN Test

Tap LAN Test on the Diagnostics & Advanced screen to display the Ethernet Diagnostics screen.

#### Ethernet Diagnostics Screen

< ВАСК	Ethernet	Diagnostics	
Current Ethernet Se	ettings		Link: 🔵
MAC: 00:10:7f:da:64:5f		IP Address: 10.0.1.34	
Subnet Mask: 255.255	.255.0	Default Router: 10.0.1.1	
Primary DNS: 10.0.1.1		Secondary DNS:	
Hostname: TSW-1070-	IH1		
Domain: localdomain			
Ping Default Router	Test		
ON OFF	PING 10.0.1.1 ( 64 bytes from	10.0.1.1) 56(84) bytes of d 10.0.1.1: icmp_seq=1 ttl=	ata. 255 time=0
	,		
Ś			Save & Exit

Use the **Ethernet Diagnostics** screen to view and test the Ethernet connection. The Ethernet Diagnostics screen displays the touch screen MAC and IP addresses, subnet mask address, default router address, primary and secondary DNS addresses, host name, and domain name. A **Link** indicator is provided to indicate the status of the Ethernet connection. (Green indicates that the Ethernet connection is active.)

The **Ethernet Diagnostics** screen also provides controls to test the connection to the default router. Tap **On** to begin the test and **Off** to end the test.

During the router test, the touch screen pings the default router. If the router is communicating with the touch screen, connection data is displayed below the ping test controls within five seconds. The connection data updates after every successive ping.

Tap < BACK to return to the Diagnostics & Advanced screen.

# Wi-Fi Test

Tap Wi-FiTest on the Diagnostics & Advanced screen to display the Wi-Fi Diagnostics screen.

#### Wi-Fi Diagnostics Screen

< васк WiFi	i Diagnostics	
Current WiFi Settings		Link: 🔵
WiFi MAC: 00:00:00:00:00:00	IP Address: 10.0.1.6	
Subnet Mask: 255.255.255.0	Default Router: 10.0.1.1	
Primary DNS: 10.0.1.1	Secondary DNS:	
Hostname: 1070-00107FDA645F	Domain: localdomain	
SSID: Ham		
BSSID: b8:c7:5d:07:f7:f7	Signal Str: 100 %	
Radio Band: G	RSSI: -21 dB	
Ping Default Router Test		
ON OFF		
		Save & Exit

Use the **Wi-Fi Diagnostics** screen to view and test the Wi-Fi network connection. The Ethernet Diagnostics screen displays the Wi-Fi network MAC and IP addresses, subnet mask address, default router address, primary and secondary DNS addresses, host name, and domain name. A **Link** indicator is provided to indicate the status of the Wi-Fi network connection. (Green indicates that the Wi-Fi network connection is active.)

The **Wi-Fi Diagnostics** screen also provides controls to test the connection to the default router. Tap **On** to begin the test and **Off** to end the test.

During the router test, the touch screen pings the default router. If the router is communicating with the touch screen, connection data is displayed below the ping test controls within five seconds. The connection data updates after every successive ping.

Tap < BACK to return to the Diagnostics & Advanced screen.

# About

Tap **About** on the Setup screen to display the **About** screen.

#### About Screen



Use the **About** screen to view information about the touch screen, including the firmware version and the operating system versions.

Tap **Check For App Updates** to scan the network for any updates to the touch screen applications. If application updates are available, the touch screen downloads and installs the updates. The status of the updates is shown on the bottom of the screen.

**NOTE:** The **Check For App Updates** button is shown only if an application is running on the touch screen.

Tap **RESTORE** at the top right of the screen to restore the touch screen to its default factory settings.

Tap < BACK to return to the Setup screen.

# Web Configuration

The touch screen may be monitored and configured using the included web configuration interface. The configuration interface is accessible from a web browser if the touch screen IP address is known.

The web configuration interface is also accessible through the XiO Cloud[®] service. For more information, refer to Connect to XiO Cloud Service (on page 110).

To access the configuration interface:

- 1. Use the Device Discovery tool in Crestron Toolbox[™] software to discover the touch screen and its IP address on the network.
- 2. Open a web browser.
- 3. Enter the touch screen IP address into the browser URL field. The configuration interface is displayed (TSS-770 shown).

**NOTE:** If authentication is enabled for the touch screen, an administrator username and password must be entered prior to accessing the web configuration interface. For more information on configuring authentication settings, refer to Authentication (on page 96).

#### Web Configuration Interface

CRESTRON,		
TSS-1070-IH1		✓ Action <
✓ Status ✿ Settings ▲ Security	802.1x Configuration	
▶ Device		
▶ Network		
▶ USB		
Room Scheduling		
▶ Display		
© 2020 Crestron Electronics, Inc. CCUI Version: 20.8		Privacy Statement

The configuration interface provides the following tabs:

- Status: Used to monitor touch screen status
- Settings: Used to configure touch screen settings
- Security: Used to enable authentication and other security settings

• **802.1x Configuration**: Used to configure IEEE 802.1X network authentication for touch screen security

**NOTE:** Some device settings may be displayed or hidden depending on the selected application mode.

If the Crestron room scheduling application is running on the touch screen, the web configuration utility provides additional configuration options for the room scheduling application. For more information, refer to the Crestron Room Scheduling Panels Operations Guide.

The **Status** tab is the default tab that is displayed, as shown in the previous image.

# Actions Menu

The configuration interface provides an **Actions** drop-down menu on the top right of the page. The **Actions** menu may be accessed at any time.

#### Actions Menu



Once any changes have been made to the touch screen configuration, the **Actions** button changes to a **Save Changes** button. Select**Save Changes** to save changes to the configuration settings.

If a restart is required after changes have been saved, a dialog box is displayed asking whether the restart should be performed. Select **Yes** to restart the device or **No** to cancel the restart.

The **Actions** menu provides the following selections.

# Reboot

Select **Reboot** to restart the touch screen.

After **Reboot** is selected, a dialog box is displayed asking whether the touch screen should be restarted. Select **Yes** to restart the device or **No** to cancel the restart.

### Restore

Select **Restore** to restore the touch screen configuration settings to their default values.

After **Restore** is selected a dialog box is displayed asking whether the device settings should be restored. Select **Yes** to restore the settings or **No** to cancel the restore.

# Update Firmware

Select **Update Firmware** to upgrade the touch screen firmware manually with a downloaded PUF (package update file). The **Firmware Upgrade** dialog box opens.

Firmware Upgrade Dialog Box

Firmware Upgrade	:		×
1 Browse	2 File Upload	3 Upgrade Process	4 Complete
Select File	+ Browse		
			li

To upload a firmware PUF through the web configuration interface:

**NOTE:** Visit the appropriate device product page or <u>www.crestron.com/Support/Resource-</u> Library to download the latest firmware PUF.

- 1. Select **Browse**, and then navigate to the firmware PUF on the host computer.
- 2. Select the firmware PUF, and then select Open.
- 3. Select **Load** to load the PUF to the touch screen. The upload progress is shown in the dialog box.
- 4. Once the touch screen has completed the firmware upgrade, select OK.

Select the **x** button to close the **Firmware Upgrade** dialog box at any time during the upgrade process. Selecting the **x** button before the PUF is uploaded to the touch screen cancels the upgrade.

# Download Logs

Select **Download Logs** to download the touch screen message logs for diagnostic purposes. The message files download as a compressed .tgz file. Once the compressed file is downloaded, extract the message log files to view them.

# Manage Certificates

Select **Manage Certificates** to manage any certificates that are installed on the touch screen. For more information on certificate management, refer to 802.1x Configuration (on page 105).

# Enter Setup

Select **Enter Setup** to force the touch screen to enter its built-in setup interface.

# **Enter Standby**

Select **Enter Standby** to force the touch screen to enter standby mode.

# Save Changes

Select **Save Changes** to save any changes made to the configuration settings.

# Revert

Select **Revert** to revert the touch screen back to the last saved configuration settings.

# Upload Scheduling Project

Select **Upload Scheduling Project** to upload a custom scheduling project to the touch screen. A **Project Upload** dialog box opens.

#### Project Upload Dialog Box

Project Upload			×
1 Browse	2 Project Upload	3 Complete	
Select File	+ Browse		
			4

**NOTE:** This selection is available only if the touch screen is running in **Crestron Default** scheduling mode.

To upload a custom scheduling project:

- 1. Select **Browse**, and then navigate to the project .vtz file on the host computer.
- 2. Select the project .vtz file, and then select **Open**.
- 3. Select **Load** to load the project .vtz file to the touch screen. The upload progress is shown in the dialog box.
- 4. Once the touch screen has completed the project upload, select OK.

Select the **x** button to close the **Project Upload** dialog box at any time during the upgrade process. Selecting the **x** button before the project file is uploaded to the touch screen cancels the upload.

# App Upgrade

Select **App Upgrade** to update the currently selected application. The update progress is shown in a pop-up window.

Once the update is complete, select **OK** to close the pop-up window.

# Status

Select the **Status** tab on the top left of the configuration interface to display selections for viewing the status of device, network, and control system settings.

Select on a selection name to expand the selection. If the selection is expanded, select the selection name again to collapse the section.

#### **Status Tab Selections**

🗸 Status	Settings	Security	# 802.1x Configuration
Device	9		
Netwo	ork		
► USB			
► Room	Scheduling		
Displa	у		

Each selection is described in the sections that follow.

### Device

Select **Device** to view general device information.

#### Status Tab - Device

✓ Device	
Model	TSS-1070
Serial Number	1948JBH01463
Firmware Version	1.000.0065
+ More Details	

The following **Device** information is displayed:

- Model: The touch screen model name
- Serial Number: The touch screen serial number
- Firmware Version: The firmware version loaded onto the touch screen

Select + More details at the bottom of the Device tab to display an expanded section that shows additional touch screen information. If + More Details is selected, select - Less details to collapse the section.

# Network

Select **Network** to view the status of the network settings for the touch screen.

#### Status Tab - Network

- Network	
Host Name	ISW-1070-IH1
DNS Servers	10.0.0.1(DHCP)
- Ethernet	
Domain	localdomain
DHCP	Yes
IP Address	10.0.1.255
Subnet Mask	255.255.255.0
Default Gateway	10.0.0.1
Link Active	True
MAC Address	00.10.7f.da.64.64
- WIFI	
Domain	localdomain
Link Active	False
MAC Address	de.ad.be.ef.12.64
- LAN	
Network Proxy Settings	Disabled

The following **Network** information is displayed:

- Host Name: The touch screen host name
- **DNS Servers**: The DNS (domain name server) addresses used to resolve the touch screen domain to an IP address

Select the + (plus) icon next to **Ethernet** to display the following Ethernet settings:

- **Domain**: The touch screen domain name
- DHCP: Reports whether the IP address is static (Yes) or dynamic (No)
- IP Address: The touch screen IP address, shown only if an Ethernet connection is enabled
- **Subnet Mask**: The touch screen subnet mask address, shown only if an Ethernet connection is enabled
- **Default Gateway**: The gateway router address, shown only if an Ethernet connection is enabled

- Link Active: Reports the status of the Ethernet connection (A true message indicates that the Ethernet connection is active, while a false message indicates that the Ethernet connection is inactive.)
- MAC Address: The unique touch screen MAC (media access control) address

Select the + (plus) icon next to WI-FI to display the following Wi-Fi network settings:

- Domain: The Wi-Fi network domain name
- DHCP: Reports whether the Wi-Fi network IP address is static (Yes) or dynamic (No), shown only if a Wi-Fi network connection is enabled
- **IP Address**: The Wi-Fi network IP address, shown only if a Wi-Fi network connection is enabled
- **Subnet Mask**: The Wi-Fi network subnet mask address, shown only if a Wi-Fi network connection is enabled
- **Default Gateway**: The Wi-Fi network gateway router address, shown only if a Wi-Fi network connection is enabled
- Link Active: Reports the status of the Wi-Fi network connection (A true message indicates that the Wi-Fi network connection is active, while a false message indicates that the Wi-Fi network connection is inactive.)
- MAC Address: The unique Wi-Fi network MAC (media access control) address

Select the + (plus) icon next to LAN to display the following LAN settings:

• **Network Proxy Settings**: Reports whether network proxy settings are enabled or disabled for the touch screen

For more information on configuring network settings, refer to System Setup (on page 82).

# USB

Select **USB** to view the status of a connected USB accessory, such as a room scheduling hallway sign or light bar.

#### Status Tab - USB

▼ USB	
Accessory Connected Accessory Type	No

The following **USB** information is displayed:

- Accessory Connected: The name of the connected accessory
- Accessory Type: The type of connected accessory

# Room Scheduling

Select **Room Scheduling** to view the status of the room if using a room scheduling application.

#### Status Tab - Room Scheduling

✓ Room Scheduling	
Room Status	Offline
Calendar Sync	
Fusion Online Status	Offline

The following **Room Scheduling** information is displayed:

- Room Status: The status of the connected room (available or reserved)
- **Calendar Sync**: The status of the sync between the touch screen and the room scheduling calendar
- **Crestron Fusion Online Status**: The status of the Crestron Fusion connection (if applicable)

# Display

Select **Display** to view the display status.

Status Tab - Display

Display

Display Status Standby

The **Display Status** field indicates the display status (on, standby, or screensaver).

# Settings

Select the **Settings** tab on the top left of the configuration interface to display selections for configuring various touch screen settings and to select a touch screen application.

#### Settings Selections

✓ Status ♦ Settings	02.1x Configuration
▶ System Setup	
➤ Services	
Network Proxy Settings	
Device Pairing	
▶ Audio	
▶ Auto Update	
Cloud Settings	
Applications	

Each selection is described in the sections that follow.

**NOTE:** If an invalid value is entered for a setting, the web interface will not allow changes to be saved until a valid value is entered. Red text is displayed next a setting to indicate an invalid value.

# System Setup

Select **System Settings** to configure general network and touch screen settings.

Settings Tab - System Setup

▼ System Setup
+ Time/Date
+ Network
+ Device Display
+ Proximity
+ Button Toolbar
+ Pinpoint Beacon

Select the + (plus) icon next to Time/Date to display the following time and date settings.

Settings Tab - System Setup (Time/Date)

Synchronization						
	Time Synchronization					
		2 Synchro	onize Now			
NTP Time Server	rs					
	Address	Port	Authentication Method	Authentication Key	Key ID	
	pool.ntp.org	123	None 💌	•••••		
+	Add — Remove					
Confounation						
Configuration	Time Zone	(UTC - 05: 00) E	astern Time (US & 🔻			
	Date	04/30/2021				
	Time Format	<ul> <li>12</li> <li>24</li> </ul>				
	Date Format	WMDY	-			

#### **Time Synchronization**

- **Time Synchronization**: Turn on the toggle to use time synchronization via SNTP (Simple Network Time Protocol).
- Synchronize Now: With Time Synchronization turned on, select Synchronize Now to synchronize the touch screen with the SNTP server(s) entered in the NTP Time Servers table.
- NTP Time Servers: With Time Synchronization turned on, use the provided table to enter information regarding the SNTP server(s) used to synchronize the date and time for the touch screen.
  - ° Select Add to add a new SNTP server entry into the table.
  - ° Enter the following information for each entry:
    - Enter the SNTP server address into the **Address** text field.
    - Enter the SNTP server port into the **Port** text field.
    - Use the Authentication Method drop-down menu to select the authentication method used to access the SNTP server (if one exists).
    - If an authentication method is selected, enter the key used to authenticate against the SNTP server into the Authentication Key text field.
    - If an authentication method is selected, enter the ID for the key used to authenticate against the SNTP server into the Key ID text field.
  - To remove an entry, fill the checkbox to the left of the table entry, and then select **Delete**.

#### **Time Configuration**

- Time Zone: Select a time zone for the touch screen using the drop-down menu.
- Date: Select the date for the touch screen using the pop-up calendar that is displayed.
- **Time Format**: Select the format that the time will display on the touch screen (12 hour or 24 hour).
- **Date Format**: Select the format that the date will display on the touch screen using the drop-down menu.
- **Time**: Select the time for the touch screen (in 24-hour format) using the pop-up menu that is displayed.

Select the + (plus) icon next to **Network** to display the following network settings.

Settings Tab - System Setup (Network)

- Network			
Network Configuration			
Host Name	TSW-1070-IH1		
Primary Static DNS			
Secondary Static DNS			
Ethernet			
Adapter Enabled			
DHCP Enabled			
Domain	localdomain		
IP Address	10.0.0.14		
Subnet Mask	255.255.255.0		
Default Gateway	10.0.0.1		
WIFI			
Adapter Enabled			
DHCP Enabled			
Domain	localdomain		
IP Address			
Subnet Mask			
Default Gateway			
WiFi Access Points			
	Q Scan WiFi A	ccess Points	
Select Discovered Access Points	Q		
		and Dainta	
SSID	Encryption Key	Password	Active Access Point
Ham	PA2 -	•••••	0
Network	PA 🗸	•••••	

**NOTE:** The **IP Address**, **Subnet Mask**, and **Default Gateway** fields are required only if DHCP is set to **Disabled** for Ethernet and Wi-Fi network connection.

- Network Configuration
  - Host Name: Enter the touch screen host name.
  - **Primary Static DNS**: Enter the primary DNS address.
  - Secondary Static DNS: Enter the secondary DNS address.
- Ethernet
  - **Adapter Enabled**: Turn on the toggle to use the touch screen Ethernet adapter, which allows the touch screen to make an Ethernet connection.
  - **DHCP Enabled**: Turn on the toggle to use DHCP for the Ethernet connection.

**NOTE:** If DHCP is turned on, IP does not function until a reply has been received from the server. The touch screen broadcasts requests for an IP address periodically.

- **Domain**: Enter the fully qualified domain name on the network.
- IP Address: Enter the touch screen IP address on the network.
- **Subnet Mask**: Enter the touch screen subnet mask address on the network.
- **Default Gateway**: Enter the gateway router address on the network.
- WI-FI
  - **Adapter Enabled**: Turn on the toggle to use the touch screen Wi-Fi adapter, which allows the touch screen to make a Wi-Fi network connection.
  - **DHCP Enabled**: Turn on the toggle to use DHCP for the Wi-Fi connection.
  - **Domain**: Enter the fully qualified Wi-Fi domain name on the network.
  - Subnet Mask: Enter the Wi-Fi subnet mask address on the network.
  - **Default Gateway**: Enter the Wi-Fi gateway router address on the network.
- WI-FI Access Points
  - Scan Wi-Fi Access Points: Scans the network for any open Wi-Fi access points. All discovered access points are displayed in the Select Discovered Access Points menu.
  - Select Discovered Access Points: Select an access point after completing a scan. Enter text in the search field to search for a specific Wi-Fi access point name.
  - Add Access Points: Adds the chosen access point entry from the Select Discovered Access Points field to the table below.

Each added Wi-Fi access point is displayed in a table that contains the following information.

- **SSID**: Enter or modify the SSID (name) of the Wi-Fi access point.
- Encryption Key: Select the security/encryption type used by the Wi-Fi access point.
- **Password**: Enter the password used to connect to the Wi-Fi access point.
- Active Access Point: Indicates whether a connection to the Wi-Fi access point is active

Select **Add** to add a new entry to the Wi-Fi access point table. After selecting one more entries in the Wi-Fi access point table, select **Remove** to delete the selected entries.

Select the + (plus) icon next to **Device Display** to display the following device display settings.

Settings Tab - System Setup (Device Display)

- Device Display		
LCD		
Auto Brightness		
ALS Threshold Value	50	%
Brightness	100	%
Brightness High Preset	80	%
Brightness Low Preset	10	%
Setup		
Local Setup Sequence		
Screensaver and Standby		
Standby Timeout	60	Minutes
Screensaver Enabled		
24 Hour Digital Clock Enabled		
Outdoor Temperature Enabled		
Indoor Temperature Enabled		
Date Enabled		
Date Format	WMDY •	
Brightness	50	%
Text Color	#44444	
Text Outline Color	#44444	
Text Font Face	AndroidClock -	
Header Text Line 1		
Header Text Line 2		
Header Text Justification	Center Right	
Header Text Bidirectional Text Direction	<ul> <li>Left-To-Right</li> <li>Right-To-Left</li> </ul>	
Background Image URL	۲	
Video URL		
Logo Setting	<ul><li>None</li><li>Crestron</li><li>Custom</li></ul>	
Logo URL	۲	

- LCD
  - **Auto Brightness**: Turn on the toggle to use automatic brightness control for the touch screen LCD display.
  - ALS Threshold Value: If Auto Brightness is turned on, enter a value (1–100%) for the ALS (ambient light sensor) threshold, which is used for switching between high and low autobrightness presets.
  - **Brightness**: If **Auto Brightness** is turned off, enter a value (1–100%) for the LCD display brightness.
  - **Brightness High Preset**: Enter a value (1–100%) for the LCD display high brightness preset.
  - **Brightness Low Preset**: Enter a value (1–100%) for the LCD display low brightness preset.
- Setup
  - **Local Setup Sequence**: Turn on the toggle to allow local access to the setup screens using a five-finger press.
- Screensaver and Standby
  - **Standby Timeout**: Enter a standby timeout duration (1–120 minutes) for the touch screen.
  - **Screensaver Enabled**: Turn on the toggle to show a screensaver on the touch screen during standby timeout.
  - **24 Hour Digital Clock Enabled**: Turn on the toggle to display a 24-hour digital clock on the touch screen during standby timeout.
  - **Outdoor Temperature Enabled**: Turn on the toggle to display the outdoor temperature on the touch screen during standby timeout via a join from a control system.
  - **Indoor Temperature Enabled**: Turn on the toggle to display the indoor temperature on the touch screen during standby timeout via a join from a control system.
  - **Date Enabled**: Turn on the toggle to display the date on the touch screen during standby timeout.
  - **Date Format**: Use the drop-down menu to select a format for displaying the date on the touch screen.
  - **Brightness**: Enter a brightness value (1–100%) for the screensaver.
  - **Text Color**: Select the color icon to the right of this field to display a pop-up window for selecting the text color of the screensaver, or enter a hex value for a specific color.
  - **Text Outline Color**: Select the color icon to the right of this field to display a pop-up window for selecting the text outline color of the screensaver, or enter a hex value for a specific color.
  - **Text Font Face**: Use the drop-down menu to select a font for the screensaver text.

- **Header Text Line 1**: Enter text to be displayed on the first header text line of touch screen screensaver.
- **Header Text Line 2**: Enter text to be displayed on the second header text line of touch screen screensaver.
- **Header Text Justification**: Select one of the radio buttons (**Left**, **Center**, or **Right**) to select how the header text is justified on the touch screen screensaver.
- Header Text Bidirectional Text Direction: Select one of the radio buttons (Left-To-Right or Right-To-Left) to determine the language text direction on the touch screen screensaver.
- **Background Image URL**: Enter a URL of a background image to be used by the touch screen screensaver.
- Video URL: Enter a URL of video to be used by the touch screen screensaver.
- Logo Setting: Select one of the radio buttons (None, Crestron, and Custom) to select a logo type to use on the touch screen screensaver.
- Logo URL: If Logo Setting is set to Custom, enter a URL of a custom logo to be used by the touch screen screensaver.

Select the + (plus) icon next to **Proximity** to display the following proximity settings.

#### Settings Tab - System Setup (Proximity)

 Proximity		
	Wake On Proximity	

Turn on the **Wake On Proximity** toggle wake the touch screen automatically when a user enters the touch screen proximity field.

Select the + (plus) icon next to **Button Toolbar** to display the following virtual toolbar button settings.

#### Settings Tab - System Setup (Button Toolbar)

- Button Toolbar	
Show On Wake	
Show During Standby	
Display Edge	<ul> <li>Top</li> <li>Bottom</li> <li>Left</li> <li>Right</li> </ul>
Auto Hide Timeout	1 Seconds

- Show On Wake: Turn on the toggle to show the virtual toolbar when the touch screen wakes from standby timeout.
- Show During Standby: Turn on the toggle to show the virtual toolbar during standby timeout.

- **Display Edge**: Select a radio button (**Top**, **Bottom**, **Left**, or **Right**) to select the position on the touch screen where the virtual toolbar is displayed.
- Auto Hide Timeout: Select a duration (in seconds) that must elapse before the virtual toolbar is hidden automatically.

Select the + (plus) icon next to **PinPoint Beacon** to display the following Bluetooth beacon settings.

#### Settings Tab - System Setup (PinPoint Beacon)

- Pinpoint Beacon			
	BT Enabled		
	BT Mode	Config	•

- **BT Enabled**: Turn on the toggle to use the Bluetooth beacon.
- **BT Mode**: Use the drop-down menu to select the mode (**Advertise** or **Config**) of the Bluetooth beacon.
  - Select **Advertise** to make the Bluetooth beacon available to Crestron devices that support this functionality.
  - Select **Config** to put the Bluetooth beacon into configuration mode.

### Services

Select **Services** to configure Crestron Fusion® software settings.

#### Settings Tab - Services

✓ Services		
- Fusion Cloud		
Fusion Cloud		
Fusion Cloud URL	https://api.my.crestron.com/api/Registratic	

**NOTE:** If connecting to a Crestron Fusion software on-premises server, connections are made using either traditional (outbound) or inbound communications. For more information, refer to the Crestron Fusion 10 On-Premises Software Getting Started Guide.

- **Crestron Fusion Cloud**: Turn on the toggle to allow a connection to a Crestron Fusion Cloud server. This connection is only applicable when the scheduling mode is set to **Crestron Default** or **User Project**.
- **Crestron Fusion Cloud URL**: Enter the URL used to connect the touch screen to the desired Crestron Fusion Cloud server.

# Network Proxy Settings

Select Network Proxy Settings to configure network proxy settings for the touch screen.

#### Settings Tab – Network Proxy Settings

<ul> <li>Network Proxy Settings</li> </ul>	
Proxy	
- HTTP Settings	
HTTP Proxy	
HTTP Proxy Address	
HTTP Proxy Port	0
Username	
Password	
- HTTPS Settings	
HTTPS Proxy	
HTTPS Proxy Address	
HTTPS Proxy Port	0
Username	
Password	

- **Proxy**: Turn on the toggle to configure the touch screen for use with a proxy server.
- HTTP Settings
  - **HTTP Proxy**: Turn on the toggle to use an HTTP proxy server.
  - **HTTP Proxy Address**: Enter the IP address of the HTTP proxy server.
  - **HTTP Proxy Port**: Enter the port number of the HTTP proxy server.
  - **Username**: Enter the username required for the HTTP proxy server.
  - **Password**: Enter the password required for the HTTP proxy server.
- HTTPS Settings
  - HTTPS Proxy: Turn on the toggle to use an HTTPS proxy server.
  - HTTPS Proxy Address: Enter the IP address of the HTTPS proxy server.
  - HTTPS Proxy Port: Enter the port number of the HTTPS proxy server.
  - **Username**: Enter the username required for the HTTPS proxy server.
  - **Password**: Enter the password required for the HTTPS proxy server.

# **Device Pairing**

Select **Device Pairing** to configure settings for pairing the touch screen to a CEN-ODT-C-POE. The CEN-ODT-C-POE provides local occupancy reporting for supported room scheduling apps.

**NOTE:** For more information on the occupancy sensor, refer to the <u>CEN-ODT-C-POE</u> <u>Supplemental Guide</u>. For more information on configuring the occupancy source in the Crestron scheduling application, refer to the <u>Crestron Room Scheduling Panels Operations</u> <u>Guide</u>.

#### Settings Tab – Device Pairing

✓ Device Pairing		
Device Model	POE Occ Sensor	
Pairing Retry Time (Mins)	1	
Pairing Status	Offline	
Device IP Address/FQDN		Device IP Address/FQDN is invalid
- Device Authentication		
Device Username		
Device Password		

- Device Model: Use the drop-down menu to select POE Occ Sensor.
- **Pairing Retry Time (Min)**: Enter a duration (in minutes) that must elapse before the CEN-ODT-C-POE reattempts to pair to the touch screen.
- **Pairing Status**: Reports whether the CEN-ODT-C-POE is paired to the touch screen (**Online**) or not (**Offline**).

**Device IP Address/FQDN**: Enter the IP address or fully qualified domain name of the CEN-ODT-C-POE. This is required for device pairing.

**Device Authentication**: Enter authentication credentials for the CEN-ODT-C-POE (if required):

- **Device Username**: Enter a valid username used to access the device.
- Device Password: Enter a valid password used to access the device.

# Audio

Select **Audio** to configure various audio settings for the touch screen.

#### Settings Tab – Audio Settings

▼ Audio		
- Device Audio		
Panel Mute		
Panel Volume	75	%
Media Mute		
Media Volume	100	%
Beep Enabled		
Beep Volume	75	%

**NOTE:** The **Media Volume** setting adjusts the H.264 streaming media level in relation to the **Panel Volume** setting.

- Panel Mute: Turn on the toggle to mute the main touch screen volume.
- Panel Volume: Enter a value (1–100) for the main touch screen volume level.
- Media Mute: Turn on the toggle to mute the touch screen media volume.
- Media Volume: Enter a value (1–100) for the touch screen media volume level.
- **Beep Enabled**: Turn on the toggle to mute the touch screen beep volume.
- Beep Volume: Enter a value (1–100) for the touch screen beep volume.

# Auto Update

Select Auto Update to configure automatic firmware updates for the touch screen.

**NOTE:** The **Auto Update** accordion can be used to configure auto update settings for firmware only. Automatic application updates are not affected by these settings.

Settings Tab - Auto Update

▼ Auto Update	
Auto Update	
Custom URL	
Custom URL Path	https://crestrondevicefiles.blob.core.winc
– Schedule	
Day of Week	Daily
Time of Day	02:08
Poll Interval	0 Minutes
	Update Now

- Auto Update: Turn on the toggle to use automatic firmware updates.
- **Custom URL**: Turn on the toggle use a custom update server URL. If turned off, the server URL will default to the standard Crestron update sever.
- Custom URL Path: If Custom URL Path is turned on, enter the custom URL path for the update server.
- **Day of Week**: Select the day of week when the touch screen will check for updates. Select Daily to have the touch screen check for updates every day.
- Time of Day: Enter a time of day (in 24-hour format) when the touch screen will check updates on the scheduled day.
- **Poll Interval**: Enter the polling interval (in hours) for when the touch screen will poll the server for updates.
- Select **Update Now** to check the update server for new firmware and to update the touch screen immediately if new firmware is available.

# **Cloud Settings**

Select **Cloud Settings** to enable or disable a connection between the touch screen and an XiO Cloud[®] service account. A connection to the XiO Cloud service is enabled by default.

#### Settings Tab – Cloud Settings

- Cloud Settings	]
Cloud Configuration Service Connection	

Turn on the **Cloud Configuration Service Connection** to allow a connection between the touch screen and an XiO Cloud account. This setting is turned on by default.

For more information on connecting to the XiO Cloud service, refer to Connect to XiO Cloud Service (on page 110).

# Applications

Select **Applications** to a select an application to run on the touch screen.

Settings Tab - Applications

▼ Applications				
	Application Mode	Crestron Default	•	
– Language				
	Language	English (English)	•	

Use the **Application Mode** drop-down menu to select a touch screen application from the available selections. **User Project** is selected by default.

Once a new application is selected, select **Save Changes** from the **Actions** menu. A pop-up dialog box is displayed stating that the touch screen must be rebooted for the new application to take effect. Select **Yes** to restart the touch screen now or **No** to restart the touch screen later. The touch screen restarts with the new application running.

**NOTE:** Each application uses a unique setup procedure for registering and configuring the application. For more information on supported applications, refer to Application Selection (on page 108).

# Security

Select the **Security** tab on the top left of the configuration interface to display selections for configuring security and authentication settings for the touch screen.

#### Security Tab Selections

Expand the **Security** accordion to configure the following settings:

- **SSL Mode**: Select an SSL (Secure Sockets Layer) mode to use for establishing a secure connection to the touch screen:
  - **Encrypt and Validation**: The touch screen will require a username and password to validate an encrypted SSL connection. Enter a username and password in the appropriate fields that are displayed.
  - Encrypt: The touch screen will use an encrypted SSL connection
  - **OFF**: The touch screen will not use an SSL connection.
- **Enable Authentication**: Turn on the toggle to use authentication for the touch screen as described in Authentication (below).

# Authentication

Turn on the **Enable Authentication** toggle in the **Security** settings to use authentication for the touch screen. Authentication is turned on by default. When authentication is enabled, settings are displayed within the **Security** accordion.

#### Authentication Settings

When authentication is turned on, the web configuration interface prompts the user to enter a new administrator username and password. After rebooting the touch screen, this username and password must be entered to access the web configuration utility or to connect to the touch screen through Crestron Toolbox™ software.

**CAUTION:** Do not lose the administrator username and password, as the touch screen settings must be restored to factory defaults to reset the username and password.

Use the following **Authentication Management** settings to add, delete, and edit touch screen users and groups.

#### **Current User**

Select the **Current User** tab to view and edit information for the current touch screen user.

#### Authentication Management - Current User Tab

Current User	Users	Groups	
		Name	jsmith123
		Access Level	Administrator
	Active [	Directory User	No
		Groups	Administrators
Change Curr	ent User Pas	ssword	

The following settings are displayed for the current user:

- Name: The chosen username
- Access Level: The access level granted to the user (Administrator, Programmer, Operator, User, or Connect)
- Active Directory User: Reports whether the current user is (Yes) or is not (No) authenticated through Active Directory® software

**NOTE:** A user must be added to an Active Directory group before the user may be selected as an active directory user. For more information, refer to Groups (on page 102).

• Groups: Any groups of which the current user is a member

Select **Change Current User Password** to change the password for the current user. The **Change Password** dialog box is displayed.

#### Change Password Dialog Box

Change Password	×
Current Password	
	Current Password cannot be empty
Password	
	Password cannot be less than 6 characters
Confirm Password	
	✓ OK K Cancel

Enter the existing password in the **Current Password** field. Then, enter a new password in the **Password** field, and reenter the password in the **Confirm Password** field.

Select **OK** to save the new password, or select **Cancel** to cancel the change.

### Users

Select the **Users** tab to view and edit information for the touch screen users.

#### Authentication Management - Users Tab

Current User Users Groups		
	Q Search	
Username	AD User	Actions
jsmith123	No	0 0
	₩ 4 1 ▶ ₩ 10 ▼	
Create User		

Enter text into the **Search Users** field to find and display users that match the search term(s).

Touch screen users are listed in table format. The following information is displayed for each touch screen user:

- Username: The chosen username
- AD User: Reports whether the user is (Yes) or is not (No) authenticated through Active Directory

**NOTE:** A user must be added to an Active Directory group before the user may be selected as an active directory user. For more information, refer to Groups (on page 102).

If the touch screen users span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page. Additionally, the number of users displayed on each page may be set to 5, 10, or 20 users.

An **Actions** column is also provided for each user that allows various actions to be performed. The following selections may be selected from the **Actions** column.

#### User Details

Select the information button () in the **Actions** column to view information for the selected user. The **User Details** pop-up dialog box is displayed.

#### User Details Dialog Box

User Details	×
Name Active Directory User	jsmith123 No
Groups	Administrators
	🗸 ок

The following settings are displayed for the current user:

- Name: The chosen username
- Active Directory User: Reports whether the user is (Yes) or is not (No) authenticated through Active Directory
- Groups: Lists any groups that contain the user

Select **OK** to return to the **Authentication Management** > **Users** page.

#### Update User

Select the editing button *i* in the **Actions** column to edit settings for the selected user. The **Update User** dialog box is displayed.

Update User Dialog Box

Update User		×
Name Active Directory User	jsmith123	
Password		
Confirm Password	Password cannot be less than 6 characters	
Groups	Administrators •	
	🗸 ок	× Cancel

The following **Update User** settings may be viewed or configured:

- Name: The chosen username
- Active Directory User: Turn on the toggle to use authentication via Active Directory for the selected user.
- **Password**: Enter a new password for the selected user.
- Confirm Password: Reenter the password provided in the Password field.
- **Groups**: Add the user to one or more groups. For more information, refer to Groups (on page 102).

**NOTE:** A user must be added to an Active Directory group to be selected as an Active Directory user.

Select **OK** to save any changes and to return to the **Authentication Management** > **Users** page. Select **Cancel** to cancel any changes.

#### Delete User

Select the trashcan icon 前 in the **Actions** column to delete the user.

A pop-up dialog box is displayed asking whether the user should be deleted. Select **Yes** to delete the user or **No** to cancel deleting the user.

#### Create User

Select **Create User** at the bottom of the page to create a new touch screen user. The **Create User** dialog box is displayed.

#### **Create User Dialog Box**

Create User		×
Name Active Directory User		
Password	Username cannot be empty Password cannot be less than 6 characters	
Confirm Password		
Groups	Choose 💌	
	Group Must be selected	
	V OK Cancel	

Use the following settings to create a new user:

- **Name**: Enter a username.
- Active Directory User: Turn on the toggle to use authentication via Active Directory for the user.
- **Password**: Enter a password for the user.
- Confirm Password: Reenter the password provided in the Password field.
- **Groups**: Add the user to one or more groups. For more information, refer to Groups (on the next page).

**NOTE:** A user must be added to an Active Directory group to be selected as an Active Directory user.

Select **OK** to save any changes and to return to the **Authentication Management** > **Users** page. Select **Cancel** to cancel creating a new user.

### Groups

Select the **Groups** tab to view and edit settings for touch screen groups. Touch screen groups are used to group users by access level and Active Directory authentication settings.

	Q	Search	
Group Name	AD Group	Access Level	Actions
Administrators	No	Administrator	<b>6</b> û
Connects	No	Connect	6
Operators	No	Operator	6 🛍
Programmers	No	Programmer	6 🛍
Users	No	User	6 🛍
	K <b>₹ 1</b> →	₩ 10 -	

Authentication Management - Groups Tab

Enter text in to the **Search Groups** field to find and display groups that match the search term (s).

Touch screen groups are listed in table format. The following information is displayed for each touch screen group:

- Group Name: The chosen group name
- AD Group: Reports whether the group is (Yes) or is not (No) authenticated through Active Directory

**NOTE:** Active Directory provides an additional layer of authentication for touch screen groups and users. Active directory group and user names are stored in the touch screen console along with a unique SID (security identifier). When an Active Directory user attempts to authenticate against the console, the console first checks the user credentials. If the Active Directory authentication is successful, Active Directory queries the console for the user or group's SID. The user is granted access to the touch screen only if at least one SID match is found.

• Access Level: The access level for the selected group (Administrator, Programmer, Operator, User, or Connect)

If the touch screen groups span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page. Additionally, the number of groups displayed on each page may be set to 5, 10, or 20 users.

An **Actions** column is also provided for each group that allows various actions to be performed. The following selections may be selected from the **Actions** column.

#### **Group Details**

Select the information button () in the **Actions** column to view information for the selected group. The **Group Details** dialog box is displayed.

#### Group Details Dialog Box

Group Details	×
Name Access Level	Administrators
Active Directory Group	No
	🗸 ок

The following settings are displayed for the current group:

• Name: The chosen group name



- Access Level: The access level of the group and its users
- Active Directory User: Reports whether the group is (Yes) or is not (No) authenticated through Active Directory

Select **OK** to return to the **Authentication Management** > **Groups** page.

#### Delete Group

Select the trashcan icon  $\widehat{\mathbf{m}}$  in the **Actions** column to delete the group.

A pop-up dialog box is displayed asking whether the group should be deleted. Select **Yes** to delete the group or **No** to cancel deleting the group.

#### Create Group

Select **Create Group** at the bottom of the page to create a new touch screen group. The **Create Group** dialog box is displayed.

#### Create Group Dialog Box

Create Group		×
Name		
	Group Name field cannot be empty	
Access Level	Administrator	•
Active Directory Group		
	🗸 ОК	× Cancel

Use the following settings to create a new group:

- **Name**: Enter a group name.
- Access Level: Select an access level for the group and its users from the drop-down menu.
- Active Directory Group: Turn on the toggle to use authentication via Active Directory for the group.

Select **OK** to save any changes and to return to the **Authentication Management** > **Groups** page. Select **Cancel** to cancel creating a new group.
### 802.1x Configuration

Select the **802.1x Configuration** tab on the top left of the configuration interface to display selections for configuring IEEE 802.1X network authentication for touch screen security.

#### 802.1x Configuration Tab Selections

Expand the **802.1x Configuration** accordion to configure the following settings:

- IEEE 802.1x Authentication: Turn on the toggle to use 802.1X authentication for the touch screen.
- Authentication Method: Select an 802.1X authentication method (EAP-TLS Certificate or EAP MSCHAP V2- password) from the drop-down menu.
- **Domain**: If **EAP MSCHAP V2- password** is selected for **Authentication Method**, enter a domain name that is required for authentication.
- Username: If EAP MSCHAP V2- password is selected for Authentication Method, enter a username that is required for authentication.
- **Password**: If **EAP MSCHAP V2- password** is selected for **Authentication Method**, enter a password that is required for authentication.
- Enable Authentication Server Validation: Turn on the toggle to use server validation for increased security.
- **Select Trusted Certificate Authorities**: Select trusted CAs (Certificate Authorities) from the provided CAs to be used for server validation:
  - $^\circ~$  Select the check box to the left of a CA to select it as a trusted CA.
  - Enter a search term into the text field at the top of the CA menu to search for and display CAs that match the search term.
  - Select the check box to the left of the search field at the top of the CA menu to select all CAs as trusted CAs.

Select **Manage Certificates** from the **Action** menu to add or remove CAs from the list. The **Manage Certificates** dialog box is displayed with the **Root** tab selected.

#### Manage Certificates Dialog Box - Root Tab

Q Search		
Name	Expiry Date	Actions
AAA Certificate Services	Dec 31 23:59:59 2028	<b>a</b>
AC RAIZ FNMT-RCM	Jan 1 00:00:00 2030	<b>D</b>
ACCVRAIZ1	Dec 31 09:37:37 2030	<b>D</b>
Actalis Authentication Root CA	Sep 22 11:22:02 2030	<b>D</b>
AffirmTrust Commercial	Dec 31 14:06:06 2030	Û
AffirmTrust Networking	Dec 31 14:08:24 2030	â
AffirmTrust Premium	Dec 31 14:10:36 2040	Û
ł	<ul><li>&lt; 1 2 3 4 5 ▶</li></ul>	н

Select the tabs near the top of the page to switch between the different types of CAs (**Root**, **Intermediate**, **Machine**, or **Web Server**). The same settings are provided for each type of CA.

Type a search term into the **Search...** text field to search for and display CAs that match the search term.

The following information is provided for each type of CA:

- Name: The CA name
- Expiry Date: The date and time that the CA is set to expire

If the CAs span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

Select the trashcan button in the **Actions** column for a CA to delete it. A pop-up dialog box is displayed asking if the CA should be deleted. Select **Yes** to delete the certificate or **No** to cancel.

Select Add [Type] Certificate to add a CA of one of the four available types (Root, Intermediate, Machine, or Web Server) to the list of CAs. The Add Certificate pop-up dialog box is displayed.

Add Certificate Dialog Box



To add a new certificate:

- 1. Select Browse.
- 2. Navigate to the CA file on the host computer.
- 3. Select the CA file, and then select **Open**.
- 4. Select **Load** to load the CA file to the touch screen. The upload progress is shown in the dialog box.
- 5. Once the touch screen has completed the upload, select **OK**.

Select the **x** button to close the **Add Certificate** dialog box at any time during the upload process. Selecting the **x** button before the CA file is uploaded to the touch screen cancels the upload.

Select the **x** button to close the **Manage Certificates** dialog box and to return to the **802.1x Authentication** page.

## **Application Selection**

The touch screen ships with a variety of preinstalled applications that provide out-of-the-box functionality. Once an application has been selected, it downloads from the cloud and installs on the touch screen automatically.

The following applications ship with the touch screen:

- Crestron room scheduling application
- 22 Miles[®] ADSign application¹
- Appspace[®] digital signage application
- AskCody[®] room scheduling application
- Door Tablet[®] room scheduling application
- EMS Software® room scheduling application
- Gingco.net[™] room scheduling application
- iOffice[®] room scheduling application
- Indoor Finders[®] room scheduling application
- Kardham Digital[®] room scheduling application
- Korbyt[™] room scheduling application
- Matrix Booking® room scheduling application
- Microsoft Teams Scheduling Panels application
- New Wave Apps® room scheduling application
- NFS[™] Rendezvous room scheduling application
- OfficeSpace[®] room scheduling application
- Pepperdash[®] room scheduling application
- Robin[®] room scheduling application
- SharingCloud[™] room scheduling application
- Space Connect[™] room scheduling application
- SpacelQ[®] room scheduling application
- Telelogos[®] Media4Display room scheduling application
- Teem[®] room scheduling application
- Zoom Rooms™ conferencing control and Zoom™ room scheduling application

NOTE: Support for additional applications will be provided by future firmware updates.

The touch screen runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron may run on the touch screen.

**NOTE:** Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services.

For more information on using and setting up each application, refer to the provider's website.

Note:

1. The application supports RFID functionality via the Crestron RFID-USB card reader. The RFID-USB installs next to the touch screen and connects to it over USB. Refer to the touch screen firmware release notes for more information on the supported RFID functions.

## **Connect to XiO Cloud Service**

The <u>XiO Cloud[®] service</u> allows supported devices across an enterprise to be managed and configured from one central and secure location in the cloud. Supported Crestron[®] devices are configured to connect to the service out of the box.

Use of the service requires a registered XiO Cloud account. To register for an XiO Cloud account, refer to <a href="http://www.crestron.com/Support/Tools/Licensing-Registration/XiO-Cloud-Registration-Room-Licenses">www.crestron.com/Support/Tools/Licensing-Registration/XiO-Cloud-Registration-Room-Licenses</a>.

NOTE: The device may be disconnected from the XiO Cloud service by navigating to the Cloud Services tab in Crestron Toolbox[™] software (Functions > Device Info > Cloud Services). For details, refer to the Crestron Toolbox help file.

To connect the device to the XiO Cloud service:

 Record the MAC address and serial number that are labeled on the shipping box or the device. The MAC address and serial number are required to add the device to the XiO Cloud service.

**NOTE:** If the device has multiple MAC addresses, use the MAC address that is providing the primary connection back to the network. For most devices, the Ethernet MAC address should be used. However, if your device is connecting to the network over a different protocol (such as Wi-Fi[®] communications), use the MAC address for that protocol instead.

- 2. Log in to your XiO Cloud account at portal.crestron.io.
- 3. Claim the device to the XiO Cloud service as described in the XiO Cloud User Guide.

Select the device from the cloud interface to view its status and settings. The device may now also be managed and assigned to a group or room. For more information, refer to the XiO Cloud User Guide.

**NOTE:** For XiO Cloud accounts with room-based licenses, the device must be added to a licensed room before its status and settings can be viewed.

# Operation

The touch screen is controlled by using its capacitive touch screen display. The touch screen supports gesturing and swiping controls to perform various functions. Supported touch controls vary by application or program.

The virtual toolbar is used to perform basic device functions if it has been enabled. By default, the virtual toolbar can be accessed by swiping down on the tab located at the top of the screen. The toolbar can be hidden by swiping up on the tab or is hidden automatically after a set timeout duration.



#### On-screen Toolbar Screen (with Virtual Toolbar)

The following virtual buttons are provided by default and can be used to control the touch screen or the loaded application or program (if supported). Each button can be manually enabled or disabled in the local configuration pages.

**NOTE:** Virtual button functionality can be custom programmed using a Crestron control system.

- **Power**  $\bigcirc$  : Powers the touch screen off.
- Home  $\triangle$ : Returns to the home page of the application or program.
- Lighting 'Q': Navigates to lighting controls in the application or program.
- Up : Moves up a page in the application or program.
- **Down** : Moves down a page in the application or program.
- **Microphone**  $\Downarrow$  : Enables or disables the microphone functionality.

For more information on configuring the virtual toolbar, refer to Virtual Toolbar (on page 65).

## Resources

The following resources are provided for the TSS-70 Series.

**NOTE:** You may need to provide your Crestron.com web account credentials when prompted to access some of the following resources.

## **Crestron Support and Training**

- Crestron True Blue Support
- <u>Crestron Resource Library</u>
- Crestron Online Help (OLH)
- Crestron Training Institute (CTI) Portal

### **Programmer and Developer Resources**

- <u>help.crestron.com</u>: Provides help files for Crestron programming tools such as SIMPL, SIMPL#, and Crestron Toolbox™ software
- <u>developer.crestron.com</u>: Provides developer documentation for Crestron APIs, SDKs, and other development tools

### **Related Documentation**

- Crestron Fusion[®] Software Help File
- Crestron Programming Design Guide
- <u>Crestron Room Scheduling Application Operations Guide</u>
- Crestron Room Scheduling Application Programming Guide
- Crestron Room Scheduling Application User Guide
- Crestron Touch Screens Security Reference Guide
- XiO Cloud User Guide

**Crestron Electronics, Inc.** 15 Volvo Drive, Rockleigh, NJ 07647 Tel: 888.CRESTRON Fax: 201.767.7656 www.crestron.com Product Manual – Doc. 8745E

04/26/22 Specifications subject to change without notice.