INSTRUCTION SHEET 5-RS SERIES 5-RS RUNNER KITS

PARTQTYPair of Runners2Phillips Head Screws61/4-20 Flange Nuts6

SLIM 5 SERIES RUNNER KITS 5-RS20 5-RS26

CFR/HRF SERIES
RUNNER KITS
5-RS14 (HRF Only)
5-RS16
5-RS18
5-RS20
5-RS23

DTRK SERIES RUNNER KIT 5-RS18

SLIM 5 SERIES INSTALLATION

- 1) Install the runners to the enclosure bottom through the holes shown using the supplied hardware. (FIGURE A)
- 2) Install the screws and nuts as shown. (FIGURE B)

NOTE: If your Slim 5 does not have the center holes, perform the following steps:

- 1) Install the runners using the two outer holes.
- 2) Drill into the center holes using a 9/32" drill bit.
- 3) Install the remaining nuts and bolts.

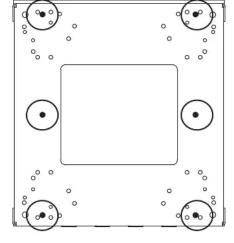


FIGURE A

