

CHV-TSTAT & CHV-THSTAT

Heating/Cooling (and Humidity) Thermostats

quickstart guide


1: Mounting

Mount the thermostat directly to drywall or to a single-gang box in accordance with accepted building codes and practices. If using the single-gang box, be sure to fill it with thermal insulation material.


For additional details and installation options, refer to the latest version of the Crestron CHV-TSTAT & CHV-THSTAT Operations and Installation Guide, Doc. 8163.

3: Setup


Press and hold **MODE** and **VIEW** to enter Setup.
Press **VIEW** to select a different parameter.
Press the **Arrow** keys to view the next value.
Press **MODE** to advance to the next screen.

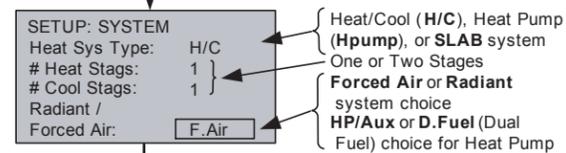

Press **MODE** until this screen appears.

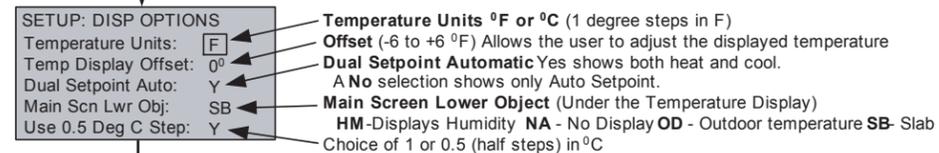

Press **MODE** until this screen appears.

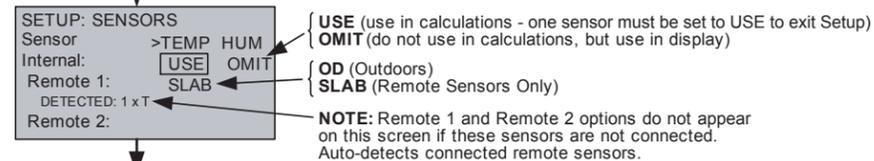


Press and hold **MODE** and **VIEW** to exit Setup.
Press **MODE** to return to beginning.

Note: To enable changes, proceed to System Mode as shown in 4: Operation and select HEAT, COOL or AUTO.

2: Connections

This is a typical 5-wire connection for a single-stage heating and cooling system. In this configuration, the P4 jumper (far right) on the circuit board (reverse of backplate) must be on 1 and 2.

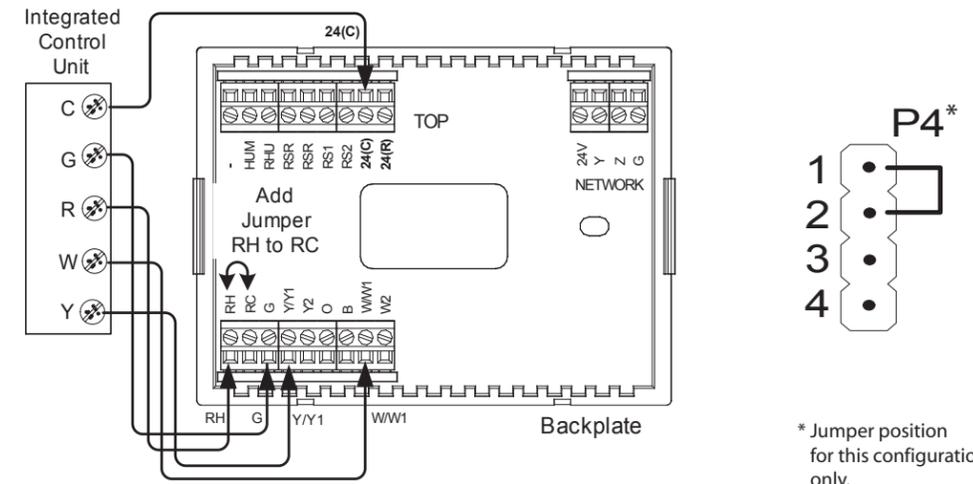

* Jumper position for this configuration only.


4: Operation

The displayed Mode screens depend on the type of system.

Press **MODE** to step to the next screen.

Use the **up** and **down** arrow buttons to make a selection.

Press **VIEW** to set humidity setpoint, see outdoor temp, and system messages.

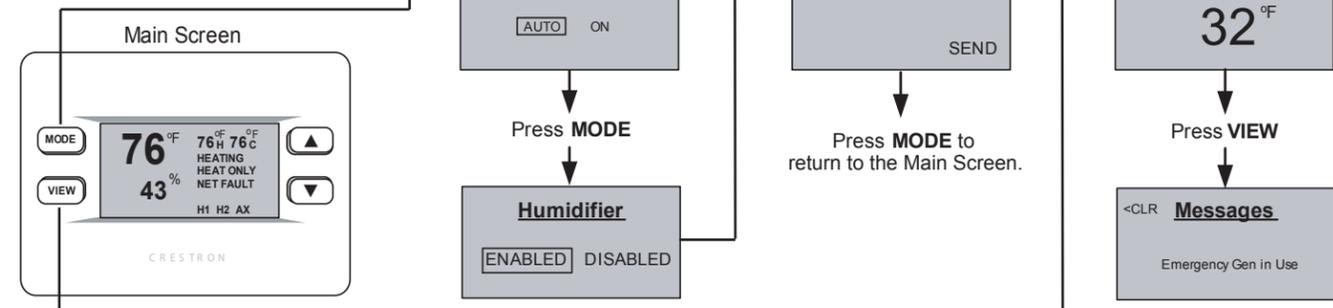

For details, check the latest revision of the **CHV-TSTAT & CHV-THSTAT** Operations and Installation Guide, Doc. 8163.

QUICKSTART DOC. 6145B (2008085) 11.05

www.crestron.com | 800.237.2041 | 201.767.3400
©2005 Specifications subject to change without notice



CHV-TSTAT & CHV-THSTAT