 


Extron® IR Emitter • Installation Guide

Wiring directions depend on the number and type of IR Emitters (single or dual). Install no more than two emitters per IR port on a controller or switcher.

Installing One Single Emitter



One Single IR Emitter


Installing One Dual Emitter



Dual IR Emitter

Installing Two Single Emitters

When installing only single emitters, tie them **in series** as shown below.

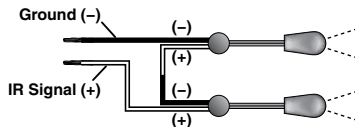

Two Single IR Emitters

Extron USA - West - Headquarters	Extron USA - East	Extron Europe	Extron Asia	Extron Japan	Extron China	Extron Middle East
+800.633.9876 Inside USA/Canada Only	+800.633.9876 Inside USA/Canada Only	+800.3987.6673 Inside Europe Only	+800.7339.8766 Inside Asia Only		+400.883.1568 Inside China Only	
+1.714.491.1500	+1.919.863.1794	+31.33.453.4040	+65.6383.4400	+81.3.3511.7655	+86.21.3760.1568	+971.4.2991800
+1.714.491.1517 FAX	+1.919.863.1797 FAX	+31.33.453.4050 FAX	+65.6383.4664 FAX	+81.3.3511.7656 FAX	+86.21.3760.1566 FAX	+971.4.2991880 FAX