SAROS SR4T/SAROS SR6T/SAROS SR8T


Saros® 2-Way Surface Mount Speakers

Saros® speakers by Crestron® deliver professional grade performance and flexible installation in a range of popular sizes for demanding commercial applications. Solid construction and high-end components are hallmarks of the complete Saros speaker line. Each Saros model is engineered to achieve a smooth, even coverage pattern, and clear, natural sound quality through the employment of a horn-loaded titanium dome tweeter, a high-performance damped cone woofer, and a finely tuned crossover.

Featuring a unique "QuickBall" mounting system, the Saros speakers can be mounted to any solid, flat surface with the ability to orient and aim the speaker in virtually any position. The QuickBall bracket achieves a very clean and stable installation using a tool-free ball-and-socket mechanism. Simply position the speaker as desired and flip the clamp lever closed. A security screw is included to deter theft by preventing the lever from being released. Saros speakers, supplied in pairs, are available in black or white and can be painted to blend with the surrounding architecture.



NOTE: Before starting installation, ensure the wall and wall material are capable of supporting the combined weight of the speakers and the wall mount assemblies. Refer to section 3 for speaker weights.

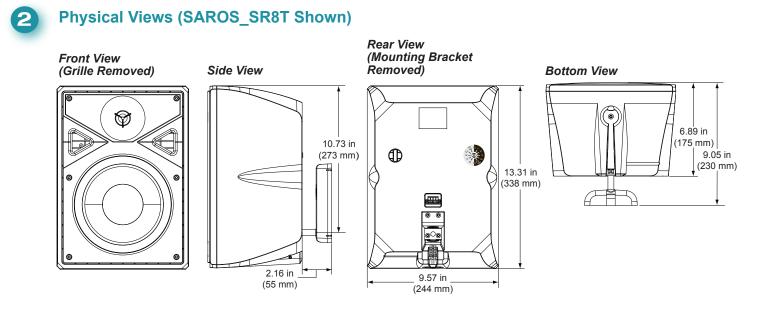



Installation

Refer to the illustration to the right as necessary, and install the speakers as follows:

- 1. Route the cables from the audio source to the intended speaker locations while following all appropriate local codes.
- 2. Attach the QuickBall mounting bracket directly to the wall or to a flush mounted 1-gang US, UK, or European electrical box, allowing the cable coming through the wall (and the electrical box, if used) to exit through the speaker cable access hole of the mounting bracket.

NOTE: If the mounting bracket is to be attached to an electrical box, be sure it is also attached to surrounding framing to provide the support needed to hold the weight of the speaker.

The QuickBall mounting bracket can also be mounted to a light pole or post using pole mounting straps (not included).

3. Detach the 4-pin screw terminal block connector from the speaker. Connect the audio source's + and - outputs to the connector's outer + and - (IN) terminals. Maximum wire size is 12 AWG. Use the inner + and - (THRU) terminals to connect a second speaker in parallel.


NOTE: The number of speakers that can be added is limited only by the specifications of the amplifier.

- Route the audio source's (and a second speaker's) wiring through the supplied weather boot (if used). Strip the wires 1/4 in (~6 mm), twist the strands, insert them into the terminal block, and tighten the screws to secure them.
- b. Reattach the terminal block to the speaker connector.

- 4. Carefully mount the speaker onto the QuickBall mounting bracket, ensuring that the ball is fully inserted into the cavity. Rotate and set the speaker at the desired angle, and raise the ball socket clamp lever into position against the bottom of the speaker to secure the speaker in position. Use the supplied security screw to prevent the lever from being accidentally pulled, which releases the speaker.
- Attach a security cable (SPKA-ST-15, sold separately) to the security cable attachment point. The other end of the cable must be attached to a secondary point able to support several times the weight of the speaker.
- The Saros speakers are equipped with a 70 V/100 V matching transformer for distributed audio systems. The transformer tap selector switch on the rear panel is used for setting the speaker power level. Use a flat blade screwdriver to adjust the switch.
 - a. For SAROS SR4T 70 V distributed systems, use the left side settings and select from 1.88, 3.75, 7.5, 15, or 30 watts.
 - b. For SAROS SR4T 100 V distributed systems, use the right side settings and select from 3.75, 7.5, 15, or 30 watts. The X position should not be
 - c. For SAROS SR6T and SAROS SR8T 70 V distributed systems, use the left side settings and select from 3.75, 7.5, 15, 30, or 60 watts.
 - d. For SAROS SR6T and SAROS SR8T 100 V distributed systems, use the right side settings and select from 7.5, 15, 30, or 60 watts. The X position should not be used.

201.767.3400

The switch may also be set to 8Ω operation, bypassing the transformer completely. This setting should be used only for 8 ohm audio systems.

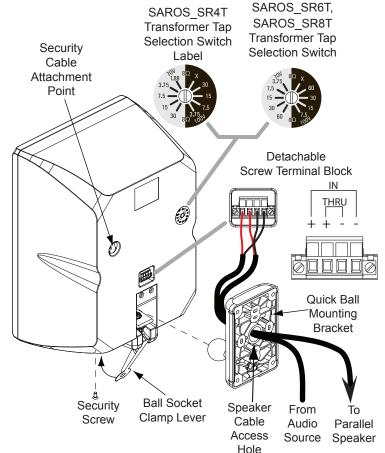



change without notice

SAROS SR4T/SAROS SR6T/SAROS SR8T

Saros® 2-Way Surface Mount Speakers



Specifications

SAROS_SR4T, SAROS_SR6T, SAROS_SR8T Specifications

SPECIFICATION	SAROS_SR4T	SAROS_SR6T	SAROS_SR8T	
Drivers Woofer	4 in (102 mm) polypropylene with ring mode decoupled cloth surround and steel basket	6.5 in (153 mm) polypropylene with ring mode decoupled cloth surround and steel basket	8 in (203 mm) polypropylene with ring mode decoupled cloth surround and steel basket	
Tweeter	0.79 in (20 mm) horn-loaded titanium dome	0.98 in (25 mm) horn-loaded titanium dome	0.98 in (25 mm) horn-loaded titanium dome	
Crossover Frequency	2.5 kHz	2 kHz	2 kHz	
Impedance	8 ohms nominal with transformer set to 8Ω	8 ohms nominal with transformer set to 8Ω	8 ohms nominal with transformer set to 8Ω	
Transformer Taps	1.88, 3.75, 7.5, 15, 30 watts at 70 V; 3.75, 7.5, 15, 30 watts at 100 V	3.75, 7.5, 15, 30, 60 watts at 70 V; 7.5, 15, 30, 60 watts at 100 V	3.75, 7.5, 15, 30, 60 watts at 70 V; 7.5, 15, 30, 60 watts at 100 V	
Frequency Response	100 Hz to 16 kHz (±3 dB)	90 Hz to 16 kHz (±3 dB)	80 Hz to 16 kHz (±3 dB)	
Frequency Range	80 Hz to 18 kHz (-10 dB)	70 Hz to 18 kHz (-10 dB)	60 Hz to 18 kHz (-10 dB)	
Power Handling	100 watts program (8 ohms)	150 watts program (8 ohms)	200 watts program (8 ohms)	
Sensitivity	89.5 dB @ 1 W/1 m	90 dB @ 1 W/1 m	91.5 dB @ 1 W/1 m	
Environmental Temperature Humidity Splash Resistance	-2° to 120° F (-19° to 49° C) 5% to 95% RH (non-condensing) IPx4 rated per IEC 60529	-2° to 120° F (-19° to 49° C) 5% to 95% RH (non-condensing) IPx4 rated per IEC 60529	-2° to 120° F (-19° to 49° C) 5% to 95% RH (non-condensing) IPx4 rated per IEC 60529	
Construction Enclosure Grille Mounting	ABS plastic, textured finish, paintable Aluminum, powder coated, paintable Surface mount to a solid flat surface with option to position over a flush-mounted 1-gang electrical box, 1-gang UK (BS 4662) electrical box, or 1-gang European (DIN 49073) electrical box; Pole mount (straps not included); Rigging point for safety tether (SPKA-ST-15 sold separately); Theft-resistant security screw	ABS plastic, textured finish, paintable Aluminum, powder coated, paintable Surface mount to a solid flat surface with option to position over a flush-mounted 1-gang electrical box, 1-gang UK (BS 4662) electrical box, or 1-gang European (DIN 49073) electrical box; Pole mount (straps not included); Rigging point for safety tether (SPKA-ST-15 sold separately); Theft-resistant security screw	ABS plastic, textured finish, paintable Aluminum, powder coated, paintable Surface mount to a solid flat surface with option to position over a flush-mounted 1-gang electrical box, 1-gang UK (BS 4662) electrical box, or 1-gang European (DIN 49073) electrical box; Pole mount (straps not included); Rigging point for safety tether (SPKA-ST-15 sold separately); Theft-resistant security screw	
Positioning Yaw (Horizontal) Pitch (Vertical) Roll Dimensions	± 30° ± 30° 360°	± 30° ± 30° 360°	± 30° ± 30° 360°	
Height Width Depth	8.67 in (220 mm) 5.91 in (151 mm) 6.50 in (165 mm), 8.66 in (220 mm) with mounting bracket	11.19 in (285 mm) 8.08 in (205 mm) 6.70 in (170 mm), 8.86 in (225 mm) with mounting bracket	13.31 in (338 mm) 9.57 in (244 mm) 6.89 in (175 mm), 9.05 in (230 mm) with mounting bracket	
Weight	5.9 lb (~3 kg)	8.3 lb (~4 kg)	10.1 lb (~5 kg)	



Problem Solving

Troubleshooting

The following table provides corrective action for possible trouble situations. If further assistance is required, please contact a Crestron customer service representative.

TROUBLE	POSSIBLE CAUSE(S)	CORRECTIVE ACTION
There is either no sound or the sound	There is a cable connection error.	Verify the cable connections between the amplifier and speakers.
from the speakers is intermittent.	The amplifier is not receiving an input signal or there is an amplifier malfunction.	Verify that the amplifer is functioning correctly, that it is receiving an input signal, and that the correct input source is selected.
Constant noise such as buzzing, humming, or	There is a faulty device in the system.	Verify that all devices in the system are functioning properly.
hissing comes from the speakers.	There is a system grounding fault.	Verify the system grounding connection.
The low frequency output is poor.	Verify speaker connection polarity (i.e., + on speaker to + on amplifier).	Verify speaker connection polarity (i.e., + on amplifier to + on speaker).

Further Inquiries

To locate specific information or resolve questions after reviewing this guide, contact Crestron's True Blue Support at 1-888-CRESTRON [1-888-273-7876] or, for assistance within a particular geographic region, refer to the listing of Crestron worldwide offices at www.crestron.com/offices.

To post a question about Crestron products, log onto Crestron's Online Help at www.crestron.com/onlinehelp. First-time users must establish a user account to fully benefit from all available features.

Future Updates

As Crestron improves functions, adds new features, and extends the capabilities of the SAROS_SR4T, SAROS_SR6T, and SAROS_SR8T speakers, additional information may be made available as manual updates. These updates are solely electronic and serve as intermediary supplements prior to the release of a complete technical documentation revision.

Check the Crestron website periodically for manual update availability and its relevance. Updates are identified as an "Addendum" in the Download column.

The specific patents that cover Crestron products are listed at patents.crestron.com.

Crestron, the Crestron logo, and Saros are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

This document was written by the Technical Publications department at Crestron ©2014 Crestron Electronics, Inc.



change without notice